

Farm King

OPERATOR AND PARTS MANUAL

960 Snowblower

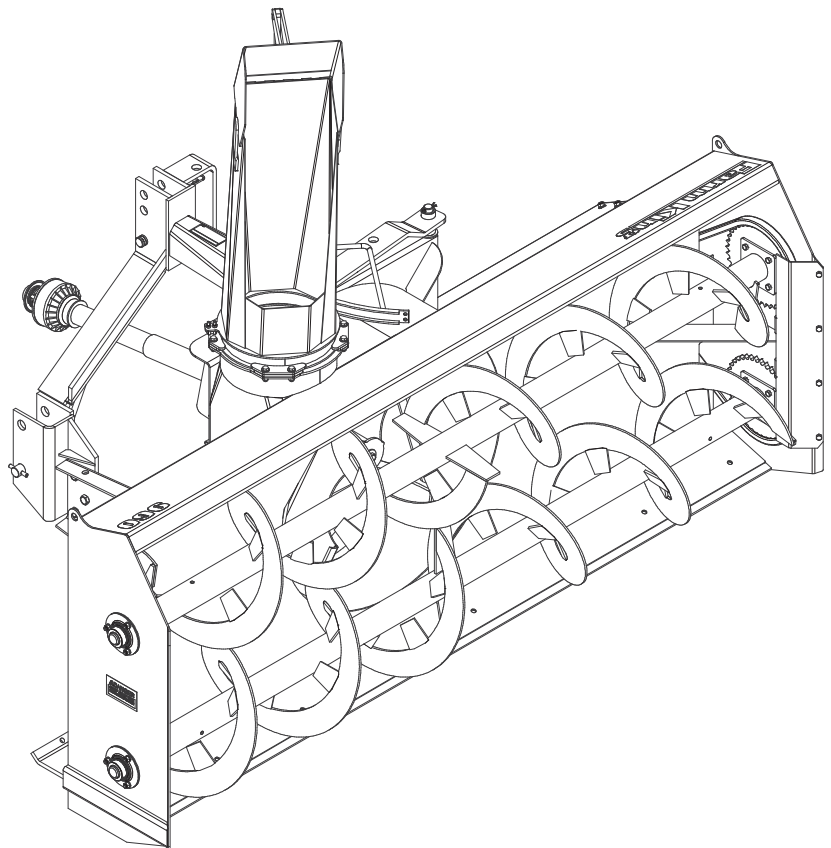


Table of Contents

Introduction	4
Safety.....	5
• Safety	5
• General Safety	6
• Start-up Safety	6
• Operation Safety	6
• Transport Safety	7
• Service and Maintenance Safety	7
• Storage Safety	8
• Safety Signs	8
• Safety Sign Installation	8
Assembly.....	9
• Assembly Instructions	9
Operation	12
• Operating Instructions.....	12
• Theory of Operation	13
Maintenance	14
• Bolt Torque	14
• Hydraulic Fittings	14
• Prevailing Torque Lock	15
Parts Drawings.....	16
• Snowblower Drawings	16
• Snowblower Parts List.....	18
• PTO Drawing and Parts List.....	20
• Gearbox Drawing and Parts List.....	21
Optional Bundles	22
• Hydraulic Cylinder & Hose Kit for Spout Swivel	22
• Cylinder Assembly	22
• Spout Deflector Cylinder & Hose Kit	23
• Cylinder Assembly	23
• Long PTO Shaft	24
• Hand Crank Kit	24
Shipping Kit and Bundle Numbers	25
Warranty Policy.....	26

Introduction

Farm King has years of snowblower manufacturing expertise. Thousands of acreages, farms, and cities depend on Farm King snowblowers. PTO-driven Farm King Snowblowers attach to 3-point hitch. This snowblower is supplied with category 2 pins with conversion bushings to category 3 available. Adjustable cup type skid shoes are standard on all models.

Four blade fans are standard on all models. Shear bolt protection is provided at the sprocket to the main auger, and is easily accessed by removing wing nuts and cover at the back of the housing. A hitch system, which is quick-hitch compatible, is standard on all models. Also available is an optional hydraulic spout deflector.

The 96" is for tractors from 90 hp to 125 hp. It has a 540-rpm oil bath gearbox with #60 chain. The chute rotation is hydraulic (cylinder and necessary hardware not included). An optional hand crank kit is available for chute rotation. Hydraulic spout deflector kits are available. There is a shear bolt on the auger and on the PTO shaft to protect the machine from damage if a large object is picked up. Any smaller objects in the snow will be thrown with it and could cause serious injury. Do not allow anyone to stand behind the tractor or in the area of the discharged snow.

Keep this manual handy for frequent reference. All new operators or owners must review the manual before using the equipment and at least annually thereafter. Contact your Farm King Dealer if you need assistance, information, or additional copies of the manual. Visit our website at www.farm-king.com for a complete list of dealers in your area.

The directions left, right, front, and rear as mentioned throughout.

Safety

Remember, YOU are the key to safety. Good safety practices not only protect you, but also the people around you. Make these practices a working part of your safety program. Be certain that everyone operating this equipment is familiar with the recommended operating and maintenance procedures and follows all the safety precautions. Most accidents can be prevented. Do not risk injury or death by ignoring good safety practices.

The alert symbol is used throughout this manual. It indicates attention is required and identifies hazards. Follow the recommended precautions.



The safety alert symbol means...

ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



CAUTION

The caution symbol indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



WARNING

The Warning Symbol indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.



DANGER

The Danger Symbol indicates an imminently hazardous situation that, if not avoided will result in death or serious injury. This signal word is to be limited to the most extreme situations, typically for machine components that, for functional purposes, cannot be guarded.

General Safety Instructions

- Have a first-aid kit available for use and know how to use it.
- Have a fire extinguisher available, stored in a highly visible location, and know how to use it.
- Wear appropriate protective gear. This list may include but is not limited to:
 - Hard hat
 - Protective shoes with slip resistant soles
 - Protective glasses or goggles
 - Heavy gloves
 - Wet weather gear
 - Hearing protection
 - Respirator or filter mask
- Read and understand the Operator's Manual and all safety signs before operating, servicing, adjusting, repairing, or unplugging the equipment.
- Do not attempt any unauthorized modifications to your Farm King product as this could affect function or safety, and could affect the life of the equipment.
- Never start or operate the snowblower except from the operator's station on the power unit.
- Inspect and clean the working area before operating.
- Keep hands, feet, clothing, and hair away from moving parts.
- Ensure bystanders are clear of the area before operating.

Start-up Safety

- Do not let inexperienced operators or children run this equipment.
- Place all tractor and machine controls in neutral before starting.
- Operate only with ROPS and seatbelt equipped tractors.
- Do not operate inside a building unless there is adequate ventilation.
- Ensure all shields are in place and in good condition before operating.
- Stay clear of PTO shaft and machine when engaging PTO.

Operation Safety

- Do not permit riders.
- Do not wear loose fitting clothing during operation.
- Stay clear of Snowblower augers.
- Stay clear of Snowblower discharge chute. Rocks or debris can be picked up and thrown.
- Never operate over 540 rpm PTO speed.
- Never operate the equipment in the raised position.

Transport Safety

Review Transport Safety instructions in tractor manual before moving. Check with local authorities regarding transport on public roads. Obey all applicable laws and regulations.

Make sure the SMV (Slow Moving Vehicle) emblem and all the lights and reflectors that are required by the local highway and transport authorities are in place, are clean, and can be seen clearly by all overtaking and oncoming traffic.

Never have the equipment in operation during transport.

Always travel at a safe speed.

Service and Maintenance Safety

- Stop engine, set brake, remove ignition key, and wait for all moving parts to stop before servicing, adjusting, repairing, or unplugging.
- Support the equipment with blocks or safety stands before working beneath it.
- Follow good shop practices including:
 - Keep service area clean and dry
 - Be sure electrical outlets and tools are properly grounded
 - Use adequate light for the job
- Use only tools, jacks, and hoists of sufficient capacity for the job.
- Replace and secure all shields removed during servicing before operating.
- Use heavy leather gloves to handle sharp objects.
- Check hydraulics regularly for leaks. Use cardboard to look for leaks, and use hand and eye protection.
- Relieve pressure on hydraulic system before repairing or adjusting.

Storage Safety



- Store the unit in an area away from human activity.
- Do not permit children to play on or around the stored machine.
- Support the frame on stands and blocks to provide a secure base.

Safety Signs

The following illustration shows the approximate location and detail of safety signs. Keep all safety signs clean and legible and replace any that are damaged or missing. When original parts are replaced, any safety signs affixed to those parts should be replaced as well. Replacement safety signs are available from your local dealer.

Installation of Safety Signs

To install safety signs, ensure the installation area is clean and dry. Decide on the exact position before you remove the backing paper. Remove the smallest portion of the split backing paper and align over the specified area. Carefully press in place. Slowly peel back the remaining paper and smooth the remaining portion in place. Small air pockets can be pierced with a pin and smoothed out.

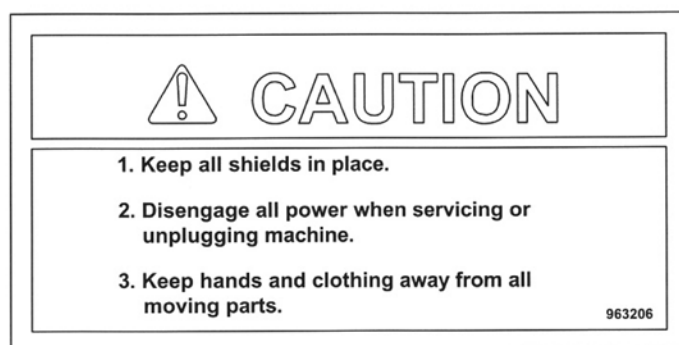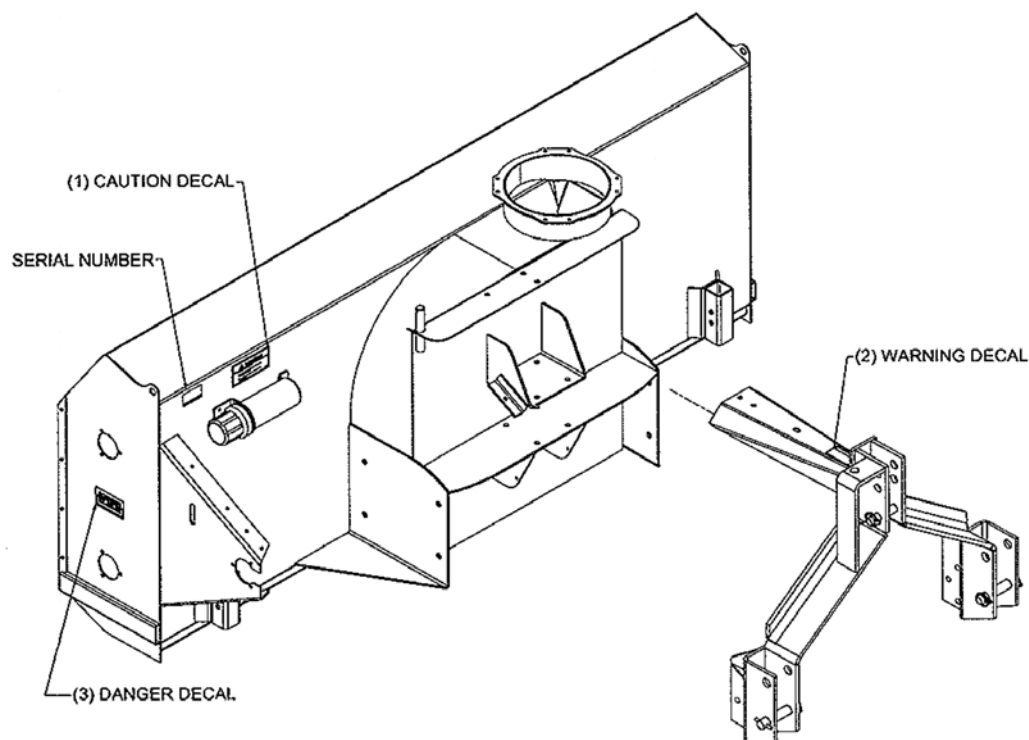


#1

Replace safety signs immediately should they become damaged, torn or illegible. Obtain replacements from your authorized dealer using the part numbers shown.



#2

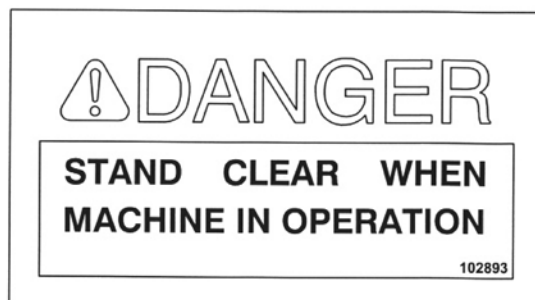

#3


Assembly Instructions

1. Fasten the two quick hitch arms (965952) to the main body. Use eight 5/8" x 1 1/4" hex bolts, lock washers and hex nuts. Note: Lift arms for quick coupling hitch are 30 3/4" long versus 35" for the standard three point hitch.
2. Bolt the quick hitch (F9203) to the snowblower body using two 1/2" x 1 1/4" hex bolts, lock washers and hex nuts. Fasten to the lift arms using three 5/8" x 1 1/2" hex bolts on each lift arm. Insert a 1" top link pin at the top and two 1 1/8" lift pins at the bottom of the hitch.
3. Bolt the hitch cross brace (965959) underneath the two quick hitch arms using two 5/8" x 1 1/2" hex bolts, lock washers, flat washers and hex nuts.
4. Mount the discharge spout (F9211) using the spout, spacers and spout clamps (815573 & 815574) bolted to the spout ring on the snowblower. Lubricate the spout ring and clamp.
5. Hydraulic Spout Swivel:
 - a. Mount the swivel arm (965923) onto the swivel pin welded to the back corner of the fan housing using a 1" ID flat washer (967140) and a 3/16" x 1 1/2" cotter pin (9812433).
 - b. Wrap cable (965964) around spout and clamp to the ends of the swivel using 1/4" cable clamps (961658).
 - c. With the spout turned forward and the swivel arm centered with the spout, clamp the cable to the spout cable anchor using another cable clamp. Ensure that the spout is not jammed and that there is no slack in the cable.
 - d. Use a standard 8" stroke cylinder (20 1/4" min., 28 1/4" max. pin centers).
 - e. NOTE: A hydraulic cylinder and hose kit to control the spout deflector is available as an option.
6. Hand Crank (Option):
 - a. Fasten hand crank assembly (965803) using two 1/2" x 1 3/4" hex bolts, lock washer and hex nuts.
 - b. Thread cable (965927) through hole in hand crank to even lengths and wrap around the tube to each side of the hole four turns in opposite directions.
 - c. Turn spout to center forward position and clamp cable to cable anchor on far side of spout using clamp (961658).

Assembly Instructions - continued

7. Mounting blower on tractor:

- a. The pins supplied with the snowblower are for a category 2 quick hitch. The quick coupling hitch has two holes both at the top of the hitch and at each lift arm. When using a quick coupler, the pins must be in the inside set of holes. Use the outside set of holes with a standard three-point hitch.
- b. Using tape or a bright colored marking pen, mark on the outer shields the position where the shaft is completely pushed together and the position where you have a 4" overlap. Watch these marks when moving the blower through all possible operating angles to see that the PTO shaft stays within this range.
- c. With the engine on the tractor shut off, attach the PTO shaft. The tractor end has a standard 6-spline end with a spring loaded locking collar. The snowblower end has a clamp-style yoke with a 3/8" key way. Slide the yoke onto the gearbox shaft with the 3/8" key supplied. Lock the yoke in place with the 1/2" x 3" hex bolt and lock nut fitted through the groove in the gearbox shaft. After tightening the bolt, insert and tighten the 3/8" socket set screw supplied.
⚠ CAUTION: Always check to see that both ends of the PTO shaft are securely attached every time the Snowblower is used. This should always be done with the tractor engine off.
- d. Check that the PTO shaft does not bottom or separate with the blower in the extreme high and low positions. A longer optional PTO shaft is available if the standard shaft is too short. Check for free movement of all parts in various raised positions; particularly the PTO shaft.
- e. NOTE: Excessive U-joint wear and shear pin failure may result if the tractor PTO angle exceeds 20. The drawing below gives an approximate way to check this angle. With the PTO half extended, the tractor output should not be over 32 inches high. Use 34 inches if the PTO is nearly fully extended and 30 inches if it is nearly compressed.

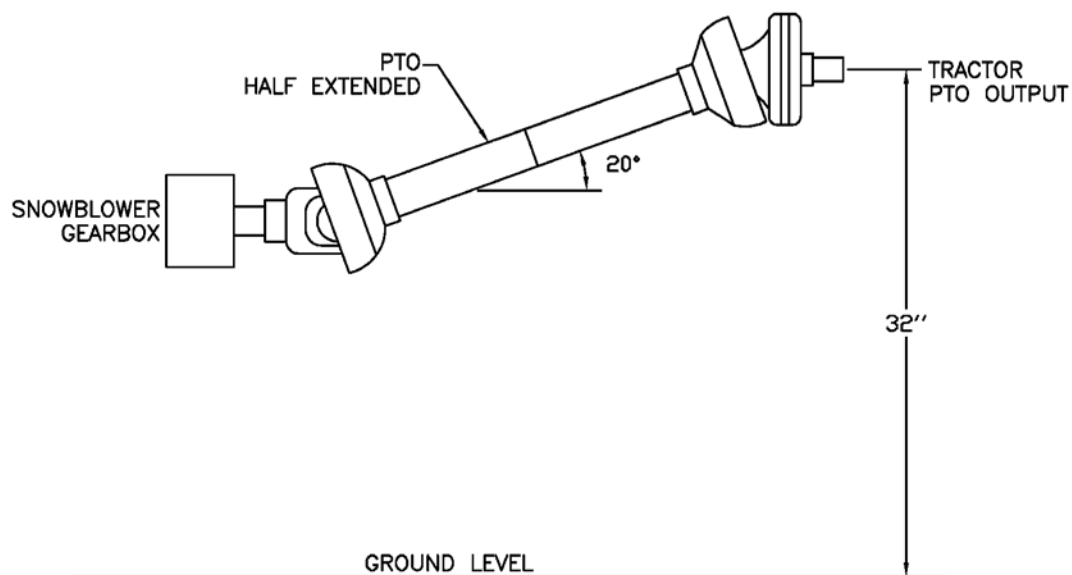

SB-26


Assembly Instructions - continued**8. PTO Shield**

All snowblowers are supplied with a PTO shield (908715). To install, remove the two rear bolts at the top of the gearbox (BU50505). Bolt the PTO shield to the gearbox by the hinges using these same bolts. A utility spring (960135) keeps the shield in place. Hook one end of the spring in the hole in the shield and the other end to the hole in the brace under the gearbox.

⚠ CAUTION: Do not run the snowblower without this shield in place.

Refilling Gearbox with Oil:

If the gearbox requires refilling with oil because of repairs to the gearbox, add oil to the level shown in drawing. Check the level regularly using the plug in the lid. The correct level is even with the bottom of the plug.

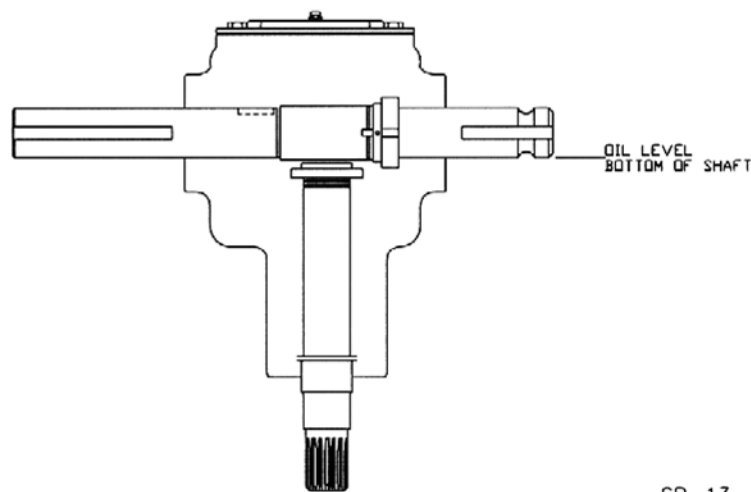

SB-13

9. Bolt-on cutting edge (option)

Fasten the bolt-on cutting edge (816325) by securing it to the bottom of the main housing (816322) using hardware (90655, 84048, 81966)


Operation Instructions

1. Do not operate the blower in the fully raised position. The three-point hitch on some tractors rises high enough to cause the PTO shaft to bind. This can cause damage to the PTO shaft and/or to the hitch and pins.
2. Depth of cut can be partially controlled by tilting the blower forward or backward. Adjust the tractor quick hitch so the snowblower is just slightly tilted back when resting on the ground.
⚠ CAUTION: Excessive backward tilt may cause the "U" joints to flutter resulting in PTO shear bolt failure.
3. Run the blower at low rpm to check operation before blowing snow.
4. The snowblower has two shear bolts to protect the tractor and blower in case a large object enters the blower. PTO shear bolt - two 5/16" x 1" (Grade 8); Auger shear bolt - 5/16" x 1 1/4" (Grade 5). Shear bolts should be fastened with a lock nut or two jam nuts. These bolts must be kept tight to prevent wear of the bolt and bolt holes.
5. Never run PTO shaft at over 600 rpm.
6. Chain Tension: Slack on the lower side of the chain should be 3/8" to 1/2".
7. Lubrication:
 - a. The spout clamps and rings should be periodically lubricated with gun grease.
 - b. PTO shaft universal joints and square shaft slide should be greased daily.
 - c. Regularly oiling the chain will significantly increase the life of the chain.
 - d. The grease fitting on the hydraulic spout swivel arm should be kept lubricated.
 - e. Gearbox - Use any 80-90 gear oil or multigrade with 80 minimum.
8. Periodically check all bolts for tightness. The bolt holding on the fan and the bearing bolts are of particular importance.
- See Maintenance (page 15) - Bolt Torque


Operation Instructions - continued

9. **⚠ DANGER:** Always stop blowing for servicing or unplugging. The PTO should be disengaged before dismounting from the tractor.
10. **⚠ CAUTION:** Always check to see that both ends of the PTO shaft are securely attached as per instructions every time you are preparing to use the Snowblower.
11. **Shear Sprocket:** The shear sprocket (#65) should be checked at the beginning of every season to make sure it will spin freely. With time this sprocket could corrode and seize which will not allow the shear bolt to break if something jams in the snowblower auger. If necessary, clean shear sprocket to ensure ability to spin freely.
12. When replacing bearings or tightening a loose bearing collar, always tighten collar in the direction of shaft rotation using a center punch or a similar tool.

Theory of Operation

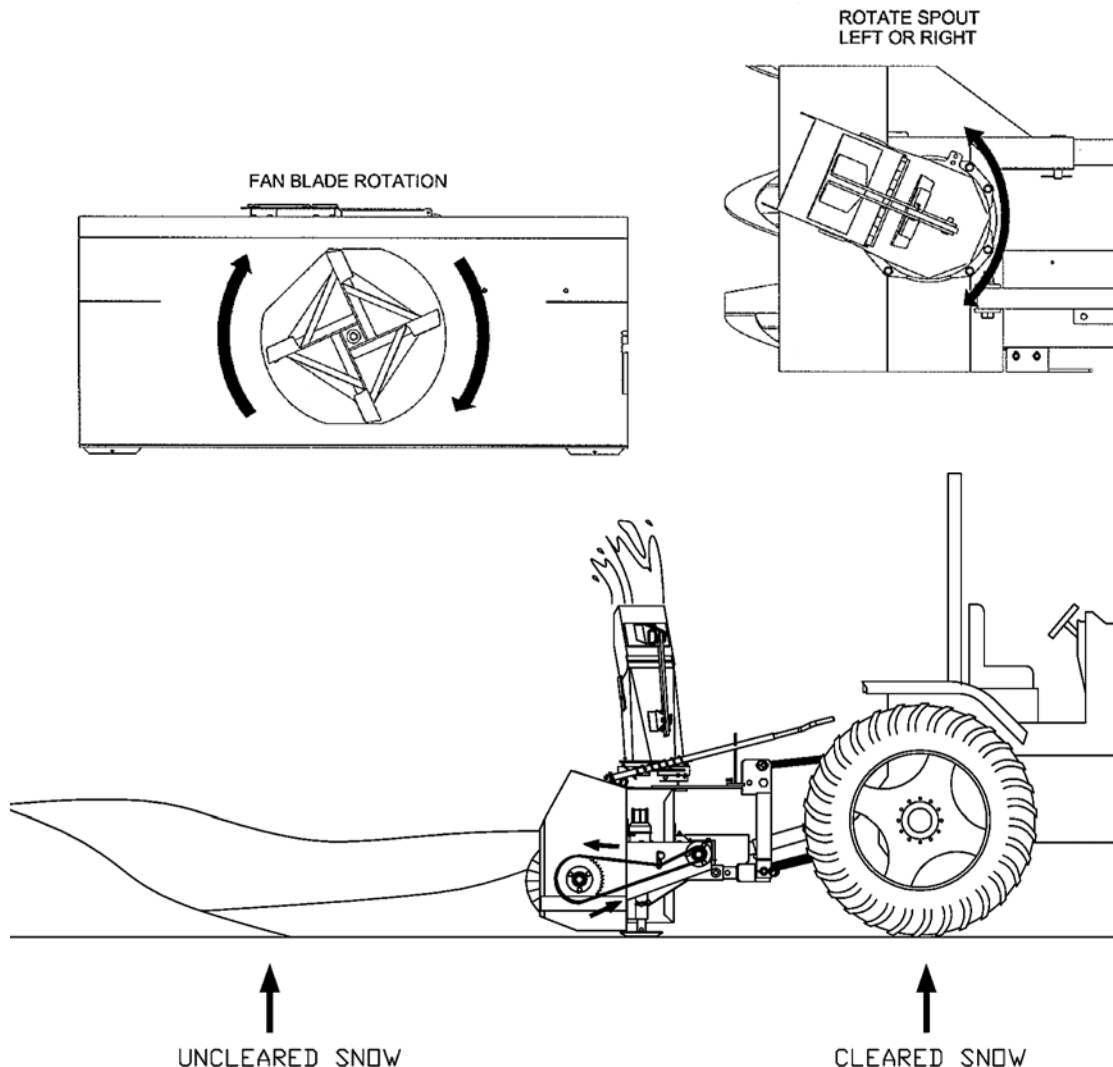

Maintenance

 Bolt Torque						
						
Bolt Diameter	Grade 2 Bolts		Grade 5 Bolts		Grade 8 Bolts	
(inches)	SAE 2		SAE 5		SAE 8	
"A"	(ft-lbs)	(NM)	(ft-lbs)	(NM)	(ft-lbs)	(NM)
0.25 (1/4)	6	7	8	11	12	16
0.313 (5/16)	11	15	17	23	25	33
0.375 (3/8)	20	27	31	42	44	60
0.438 (7/16)	32	43	49	66	70	95
0.5 (1/2)	49	66	76	103	106	144
0.563 (9/16)	70	95	109	148	153	207
0.625 (5/8)	97	131	150	203	212	287
.75 (3/4)	144	195	266	360	376	509
0.875 (7/8)	166	225	430	583	606	821
1	250	339	644	873	909	1232
1.125 (1 1/8)	354	480	795	1077	1288	1745
1.25 (1 1/4)	500	678	1120	1518	1817	2462
1.375 (1 3/8)	655	887	1470	1992	2382	3228
1.5 (1 1/2)	870	1179	1950	2642	3161	4283


1. For fine threads add 10% to the seating torque.
2. All readings are for un-plated or cadmium plated steel locknuts on un-plated or cadmium plated surfaces.
3. Use 80% of the specified torque value for plated and lubricated fasteners.
4. Seating torque figures are based on tightening the nut until the bolt has reached 75% of the specified proof load.

Hydraulic Fittings					
Dash Size	Thread Size	Jam Nut or Straight ORB Fitting Torque		SAE 37° (JIC) Swivel Nut Torque	
		(ft-lbs)	(NM)	(ft-lbs)	(NM)
-4 (1/4)	7/16-20	14 - 16	20 - 22	10 - 11	13 - 15
-5 (5/16)	1/2-20	18 - 20	24 - 27	13 - 15	18 - 20
-6 (3/8)	9/16-18	24 - 26	33 - 35	17 - 19	23 - 26
-8 (1/2)	3/4-16	50 - 60	68 - 78	34 - 38	47 - 52
-10 (5/8)	7/8-14	72 - 80	98 - 110	50 - 56	69 - 76
-12 (3/4)	1-1/16-12	125 - 135	170 - 183	70 - 78	96 - 106
-14 (7/8)	1-3/16-12	160 - 180	215 - 245	80 - 90	110 - 122
-16 (1)	1-5/16-12	200 - 220	270 - 300	94 - 104	127 - 141
-20 (1 1/4)	1-5/8-12	210 - 280	285 - 380	124 - 138	169 - 188
-24 (1 1/2)	1-7/8-12	270 - 360	370 - 490	156 - 173	212 - 235


Prevailing Torque Lock Nuts				
Nut Size and Threads per Inch	Grade B Nuts		Grade C Nuts	
	Nut Tightening Torque		Nut Tightening Torque	
	(ft-lbs)	(NM)	(ft-lbs)	(NM)
Coarse Thread				
1/4 - 20	5 - 7	7 - 9	7 - 10	9 - 14
3/16 - 18	9 - 12.5	12 - 17	11 - 16	15 - 22
3/8 - 16	14.5 - 20	20 - 27	20 - 28	27 - 38
7/16 - 14	23 - 32	31 - 43	31 - 43	42 - 58
1/2 - 13	37 - 50	50 - 68	45 - 62.5	61 - 85
9/16 - 12	50 - 70	68 - 95	70 - 95	95 - 129
5/8 - 11	70 - 95	95 - 129	90 - 122.5	122 - 166
3/4 - 10	125 - 165	169 - 224	155 - 210	210 - 285
7/8 - 9	185 - 250	251 - 339	225 - 312.5	305 - 423
1 - 8	275 - 375	373 - 508	360 - 462.5	488 - 627
Fine Thread				
1/4 - 28	5.5 / 7.5	7 - 10	7 - 10	9 - 14
3/16 - 24	10 - 13	14 - 18	12 - 17	16 - 23
3/8 - 24	16 - 22	22 - 30	21 - 29	28 - 39
7/16 - 20	24 - 34	33 - 46	31 - 43	42 - 58
1/2 - 20	37.5 - 52.5	51 - 71	50 - 70	68 - 95
9/16 - 18	57.5 - 77.5	78 - 105	70 - 95	95 - 129
5/8 - 18	72.5 - 97.5	98 - 132	90 - 125	122 - 169
3/4 - 16	120 - 165	163 - 224	155 - 210	210 - 285
7/8 - 14	200 - 270	271 - 266	225 - 312.5	305 - 423
1 - 14	300 - 400	407 - 542	362.5 - 500	491 - 678

1) For Grade A locknut torque specifications refer to Grade B specifications.

96" Snowblower w/Quick Hitch

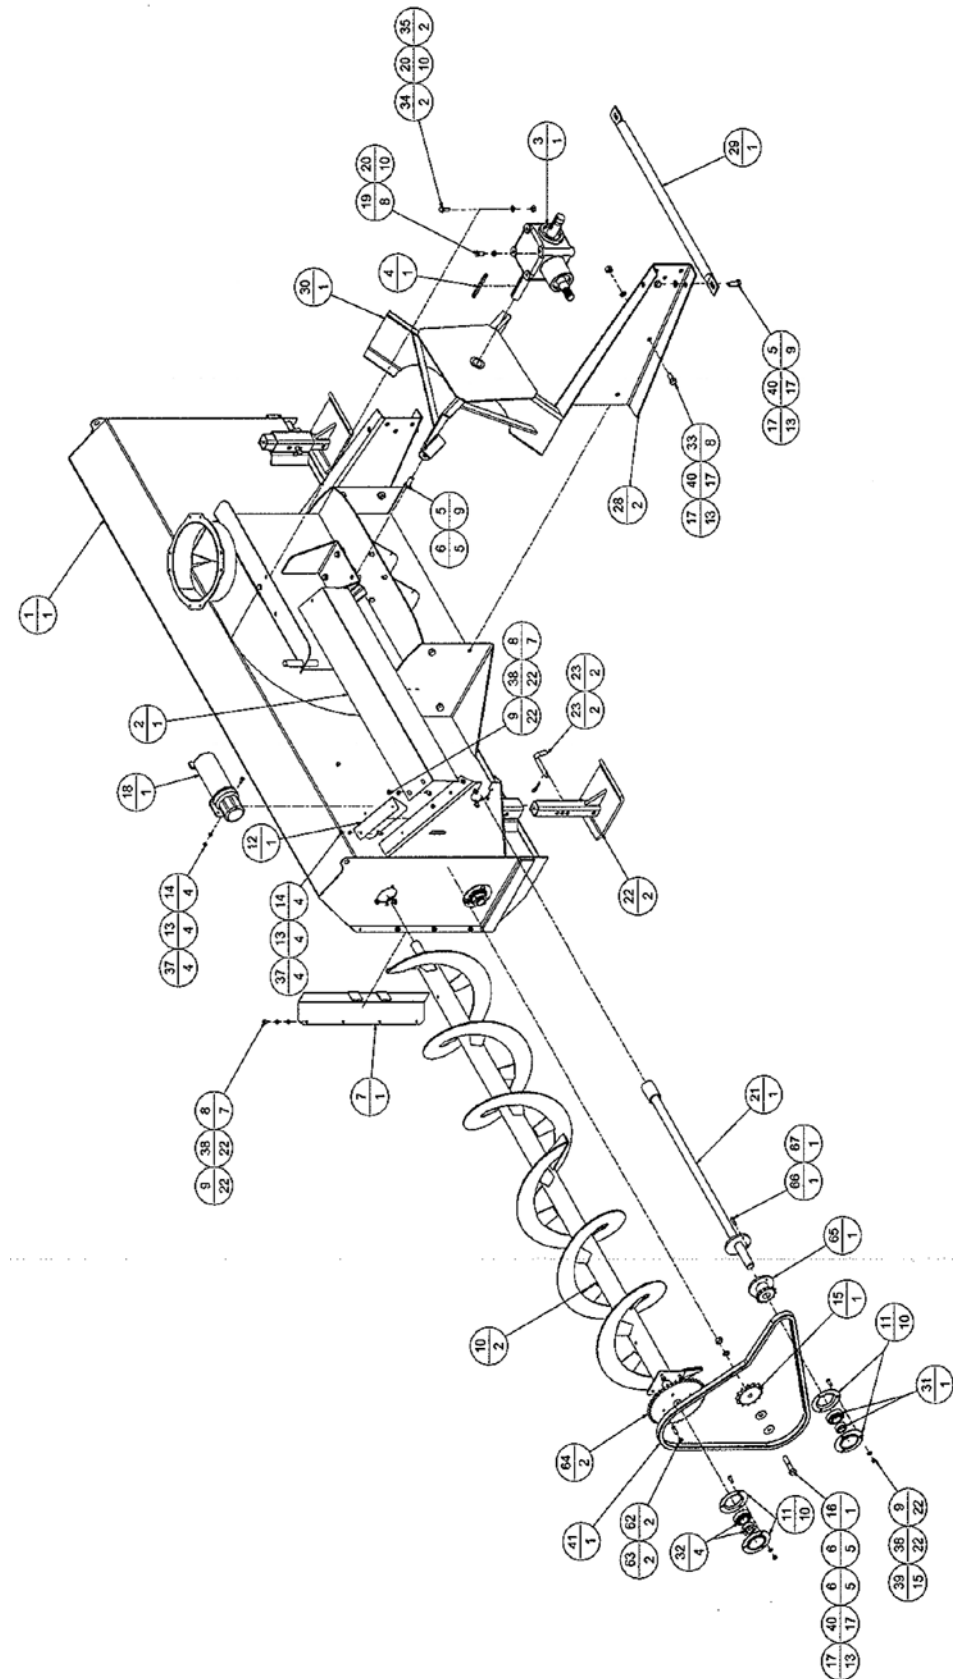

96" Snowblower w/Quick Hitch

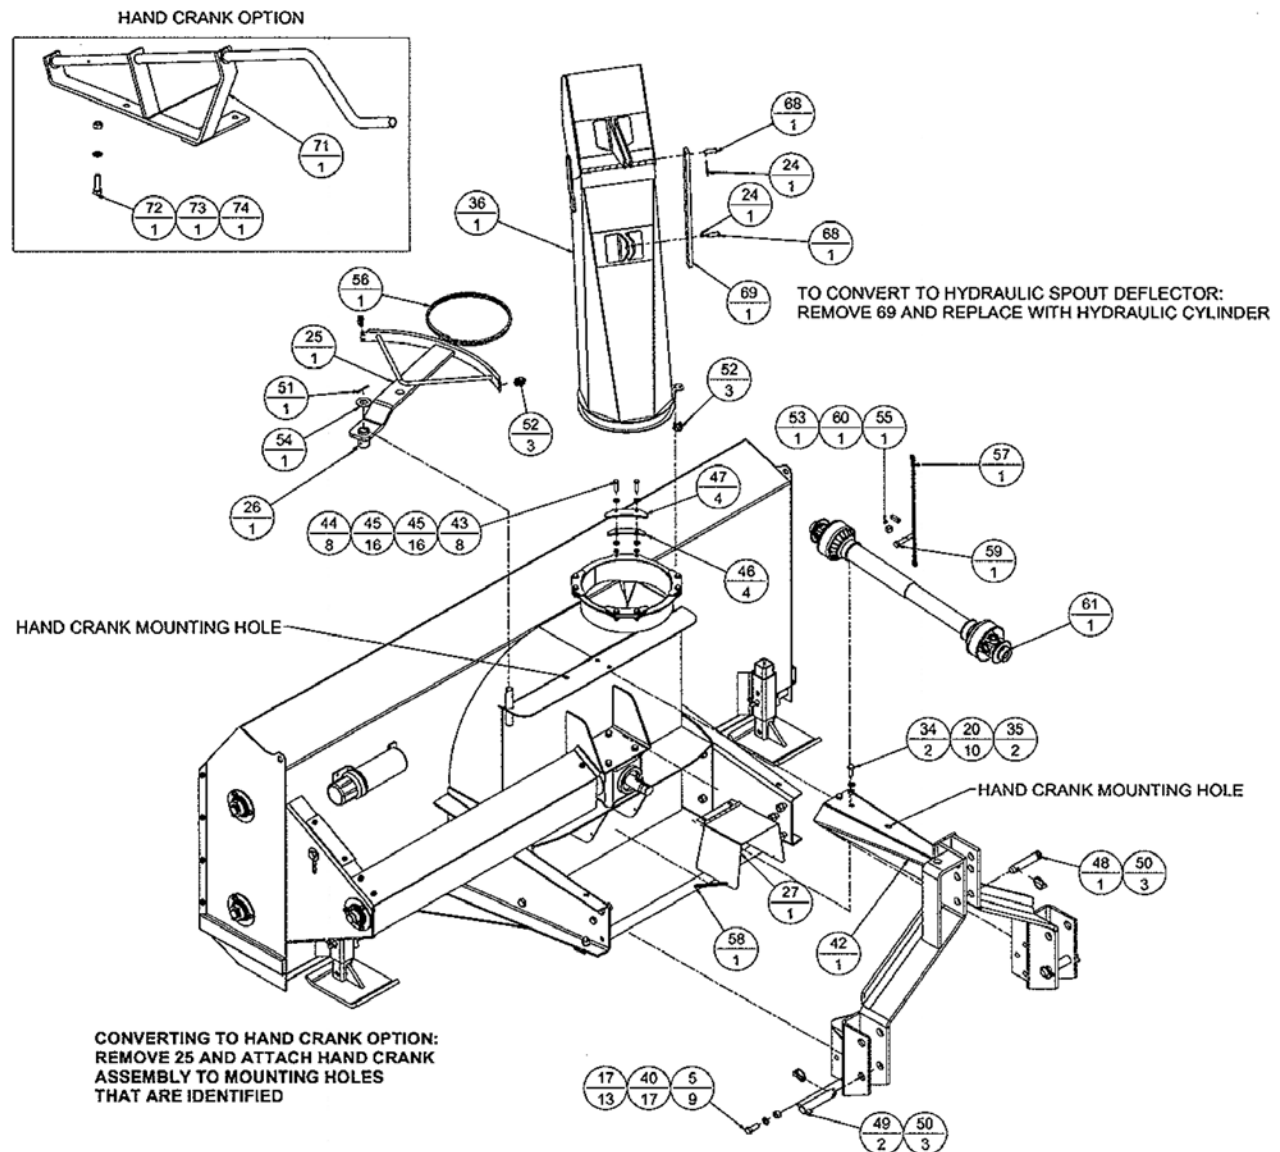

When Ordering Parts

Always give your dealer the Model, Color and Serial Number of your machine to assist them in ordering and obtaining the correct parts. Use the exploded view and tabular listing of the area of interest to exactly identify the required part.

960 Snowblowers


F0625 Body Assembly *

Item	Part Number	Description	
1	816322	96" Main Hsg Weldt	1
2	965919	16Ga x 10" x 42-3/8" Dr Shft Guard	1
3	BU50505	Gearbox Assy	1
4	902377	3/8" x 3/8" x 4-3/4" Fan Shft	1
5	84268	Bolt Hex 0.625Nc x 1.50 Gr5 Pl	9
6	81678	5/8" Flat Washer Std (Pl)	5
7	965963	Chain Guard Weldt	1
8	84072	3/8" x 3/4" Hex Bolt (Pl)	7
9	81592	3/8" Hex Nut (Pl)	22
10	901844	Aug Assy	2
11	961675	Bearing Flange 72Ms	10
12	965968	14Ga x 7-1/2" x 8" Idler Shld	1
13	81569	5/16" Lock Washer Pl	4
14	81568	5/16" Hex Nut Pl	4
15	965962	#60 13T Sprkt	1
16	84289	5/8" x 3" Hex Bolt (Pl)	1
17	81676	5/8" Hex Nut (Pl)	13
18	909277	Manual Holder 3-1/2" x 12"	1
19	81619	Bolt Hex 0.500 x 1.00 Gr5 Pl	8
20	81637	0.50 Lock Washer	10
21	901828	Drive Shaft Assy	1
22	910191	Skid Weldt	2
23	900712	Pin Weldment	2
24	961012	#16 Hair Pin Clip	2
25	965923	Hyd Swvl Arm Weldt	1
26	967164	Drive-In Grease Zerk	1
27	908715	Pto Shld Weldt	1
28	965952	Quick Htch Arm 1/4"	2
29	965959	1/8"w x Ø1-1/2" x 39-1/2" Htch x Brace	1
30	965448	4-Blade Fan Weldment	1
31	961676	1-1/4" Bearing Ael206-104 (Rhp #1230)	1
32	965917	1-3/8" Bearing	4
33	811702	Hex Bolt 5/8-11 Unc - 1.25	8
34	81620	Bolt Hex 0.500Nc x 1.25Gr5 Pl	2
35	81636	1/2" Hex Nut (Pl)	2
36	F9211	96" Spout Assembly	1

37	81549	Bolt Hex 0.313Nc x 0.75 Gr5pl	4
38	81593	Lock Washer 0.375	22
39	86170	Hex Bolt 0.375 Unc x 1.0	15
40	81677	Washer Lock 0.625 Pl	17
41	965972	Roller Chain #60 x 117 w/c & o	1
42	F9203	Quick Htch Weldt	1
43	811792	Bolt Hex 0.375 x 1.50	8
44	812363	Nut Lock (Steel) 0.375 Grb Pl	8
45	81570	Washer 0.375 Flat St Hs Pl	16
46	815573	96" Spout Spacer	4
47	815574	96" Spout Clamp	4
48	965910	Cat 2 Top Link Pin	1
49	965966	Lift Pin Cat 2	2
50	965911	7/16" Linch Pin	3
51	9812433	3/16" x 1-1/2" Cotter Pin	1
52	961658	1/4" Cable Clamp (Pl)	3
53	968807	3/8" x 3/8" x 1-1/2" PTO Shft Key	1
54	967140	1" x 10Ga Narrow Rim Wash (Pl)	1
55	988999	3/8"Ø x 3/8" Socket Set Screw (Br)	1
56	965964	Ø 1/4" x 70" Cble	1
57	910426	Safety Chain - All	1
58	960135	PTO Shld Sprg (#661)	1
59	81627	1/2" x 3" Hex Bolt (Pl)	1
60	812364	Nut Lock (Steel) 0.500Nc Grb Pl	1
61	F0585	PTO Shaft	1
62	9812404	3/8" Hex Nut Grade 2 (Pl)	8
63	9812356	3/8" x 1-1/4" Hex Bolt Grade 5 (Br)	8
64	965912	40 Tooth Sprocket, #60, 1-3/8" Bore	2
65	965914	13 Tooth Sprocket, #60, 1-1/4" Bore	1
66	812362	5/16" Lock Nut Grade B (Pl)	1
67	81552	5/16" x 1-1/4" Hex Bolt Grade 5 (Pl)	1
68	961876	1/2" x 1-1/2" Clev Pin (Pl)	2
69	965646	Spout Adj Bar	1
70	903297	Bag Of Shear Pins	1

* Sold as subassemblies unless a part number is shown with description

PTO Drawing - (Standard)

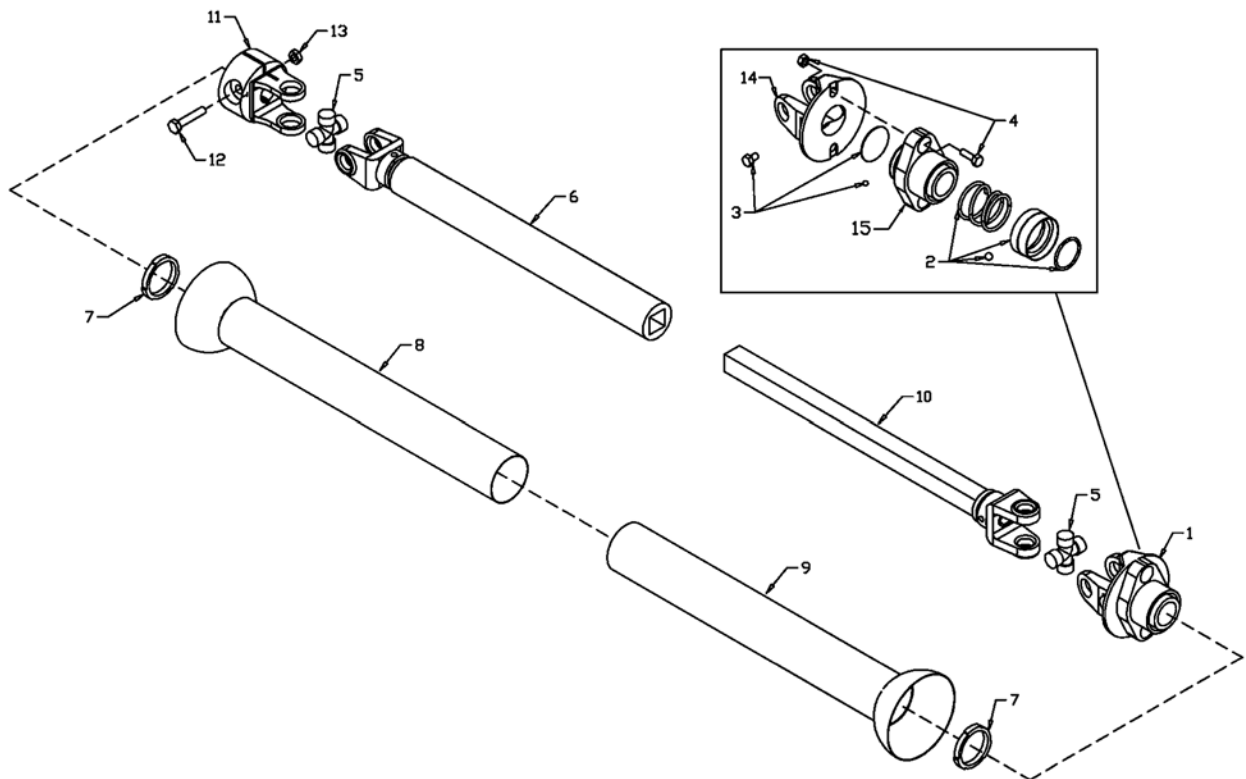


SB-24

F0585 Standard PTO Shaft *

Item	Part Number	Description
1	907989	Shear Assembly
2	936199	Safety Slide Lock Repair Kit
		(Collar, Spring, Ret. Ring, 2-Pawls)
3	936249	Shear Assembly Repair Kit
		(3/8" x 1/2" Bolt, Lube, Blank, 31-1/4" Balls)
4	903297	Shear Bolt - 5/16" x 1" (Grade 8) (Pack of 10)
5	936197	Repair Kit (Option)
	906548	Extended Life Repair Kit (Std.)
6	907994	Yoke & Tube
7	907991	Nylon Bearing
8	907993	Inner Shield
9	907992	Outer Shield
10	907990	Yoke & Shaft
11	907995	Clamp Yoke
14	908002	Shear Yoke
15	936411	6 Spl Shear Hub

* Sold as subassemblies unless a part number is shown with description

Gearbox

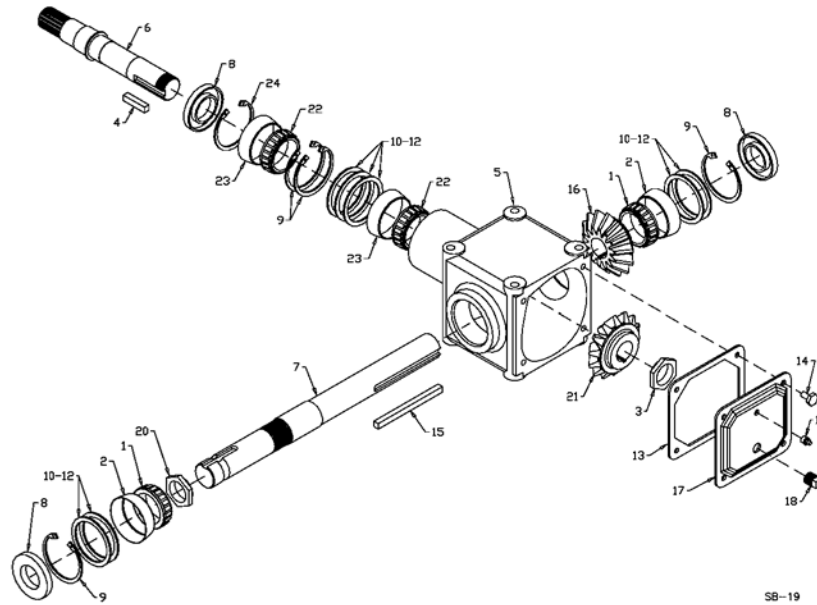


Gearbox Assembly Parts List - BU50505

BU50505 Gearbox Complete Without Oil *

Item	Part Number	Description
1	BU575901	Bearing Cone (2 used)
2	BU575902	Bearing Cup (2 used)
3	BU50444	Staking Lock Nut
4	BU50417-1	Key
5	BU50310	Gearbox Casting Only
6	BU50502	Pinion Shaft
7	BU50507	Cross Shaft
8	BU50422-1	Oil Seal (3 used)
9	BU50415	Retainer Ring (4 used)
10,11,12	BU50210X	Shim Set
13	BU50458	Gearbox Gasket
14		Hex Bolt 5/16" NC x 5/8" GR5 (pl)
15	BU50429	Key
16	BU50329	Bevel Gear - 1-1/2" Bore
17	BU50457	Gearbox Cover
18	BU500089-3	Pipe Plug
19	BU500167-1	Relief Valve
20	BU50428	Staking Lock Nut
21	BU50331	Bevel Gear - 1 3/8" Bore
22	BU575906	Bearing Cone (2 used)
23	BU575907	Bearing Cup (2 used)

* Sold as subassemblies unless a part number is shown with description

Optional Bundles

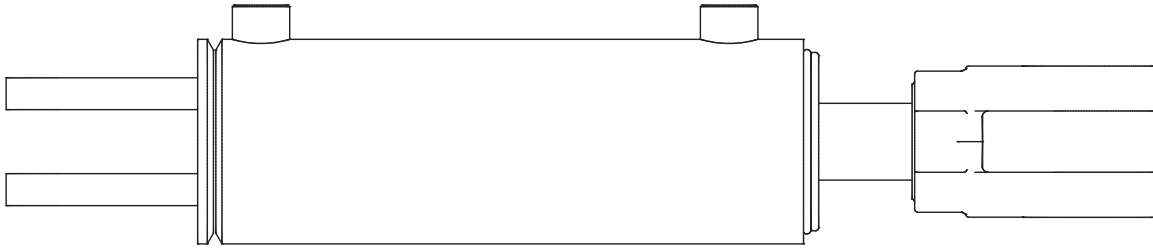


24803M 3.5 x 8 Cylinder Assembly

Item	Part Number	Description
–	X3906	Seal Kit

F9116 Hydraulic Cylinder & Hose Kit for Spout Swivel

Item	Part Number	Description
1	24803M	4" OD Hydraulic Cylinder ORB (9 3/8" Port To Port)
2	115043	1/2" x 78" Hose 1/2" MNPT X 3/4" MORB
3	103753	Cyl Clev Pin 1 x 4" Rb&Fm
4	12779	Hair Pin Clip #9

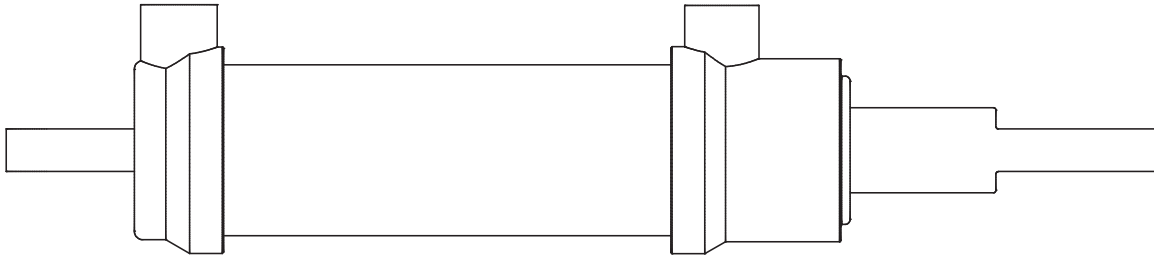
24930M 1.75 x 5 Cylinder Assembly

Item	Part Number	Description
–	X3913	Seal Kit

F9117 Spout Deflector Cylinder & Hose Kit

Item	Part Number	Description
1	24930M	1-3/4" ID x 5" Stroke Cylinder
2	116984	3/8" x 120" Hose C/W Fittings
3	960913	Clevis Pin 1/2 x 1 13/16 PI
4	9812430	Cotter Pin 1/8 x 1.00 PI

F0586 Long PTO Shaft

Item	Part Number	Description
1	936429	Shear Assembly
2	936199	Safety Slide Lock Repair Kit
		(Collar, Spring, Ret. Ring, 2-Pawls)
3	936249	Shear Assembly Repair Kit
		(3/8" x 1/2" Bolt, Lube, Blank, 31-1/4" Balls)
4	908846	Shear Bolt - 3/8" x 1" (Grade 8) (Pack of 10)
5	936197	Repair Kit (Option)
	906548	Extended Life Repair Kit (Std.)
6	907998	Yoke & Tube
7	907991	Nylon Bearing
8	907999	Inner Shield
9	908000	Outer Shield
10	908001	Yoke & Shaft
11	907995	Clamp Yoke
14	936428	Shear Yoke
15	936411	6 Spl Shear Hub

F9102 Hand Crank Kit *

Item	Part Number	Description	
71	965803	Hand Crank Weldt	1
72	87553	Bolt Hex 1/2Nc x 1-3/4 Grade 5 (PI)	2
73	81637	Washer Lock 1/2 (PI)	2
74	81636	Nut Hex 1/2Nc Grade 2 (PI)	2
75	965927	3/16" x 100' Cable	1

* Sold as subassemblies unless a part number is shown with description

X3897 Bolt-on Cutting Edge

Item	Part Number	Description	
76	816325	Cutting Edge - 96" Snowblower	1
77	81966	Nut Lock 0.50 NC PL	8
78	84048	Washer Flat Sae 0.50 BS PL	8
79	906655	Bolt Flhd 0.50 NC x 1.50 Skt PL	8

Shipping Kit and Bundle Numbers

Quantity	Bundle Number	Description
Y960Q-4 96" Farm King Snowblower w/Hydraulic Chute Control, Standard PTO & 4-Blade Fan		
1	F0625	Body Assembly
1	F9211	Spout Assembly
1	F9203	Quick Hitch
1	F0585	Standard PTO
1	F9107	Hydraulic Chute Control Kit
Y960QL-4 96" Farm King Snowblower w/Hydraulic Chute Control, Long PTO & 4-Blade Fan		
1	F0625	Body Assembly
1	F9211	Spout Assembly
1	F9203	Quick Hitch
1	F0586	Long PTO
1	F9107	Hydraulic Chute Control Kit

Optional Bundle Numbers

The following is a list of options available for the Kits listed above.

F9102 – Hand crank Kit

F9116 – Hydraulic Cylinder & Hose Kit for Spout Swivel

F9117 – Spout Deflector Cylinder & Hose Kit

Y902 – Quick Hitch Kit

X3897 – Bolt-on Cutting Edge

Warranty Policy

Buhler Trading Inc. products are warranted for a period of twelve (12) months (90 days for commercial application) from original date of purchase, by original purchaser, to be free from defects in material and workmanship under correct, normal agricultural use and proper applications.

Buhler Trading Inc.'s obligations under this warranty shall be limited to the repair or exchange, at Buhler Trading Inc.'s option, of any Buhler Trading Inc. product or part which proves to be defective as provided. Buhler Trading Inc. reserves the right to either inspect the product at the buyer's location or have it returned to the factory for inspection.

The above warranty does not extend to goods damaged or subject to accident, abuse or misuse after shipment from Buhler Trading Inc.'s factory, nor to goods altered or repaired by anyone other than an authorized Buhler Trading Inc. representative.

Buhler Trading Inc. makes no Express Warranties other than those, which are specifically described. Any description of goods, including any references and specifications in catalogues, circulars and other written material published, is for the sole purpose of identifying goods and shall conform to such descriptions. Any sample or model is for illustrative purposes only and does not create an Express Warranty that the goods conform to sample or model shown.

The purchaser is solely responsible for determining suitability of goods sold. This warranty is expressly in lieu of all other warranties expressed or implied. Buhler Trading Inc. will in no event be liable for any incidental or consequential damages whatsoever. Nor for any sum in excess of the price received for the goods for which liability is claimed.

Warranty Claims

Warranty requests must be prepared on Buhler Trading Inc. Warranty Claim Forms with all requested information properly completed. Warranty Claims must be submitted within a thirty (30) day period from date of failure repair.

Warranty Labor

Any labor subject to warranty must be authorized by Buhler Trading Inc. The labor rate for replacing defective parts, where applicable, will be credited at 100% of the dealer's posted shop rate.

Government Legislation

Warranty terms and conditions are subject to Provincial or State legislation.

Important Facts

Snowblower Fan Shafts Carry No Warranty

IMPORTANT NOTE: This warranty does not apply to rentals

www.farm-king.com

Farm King

1330 43rd Street NW
Fargo, North Dakota USA 58102
Ph.: 701.282.7014 | Fax: 701.282.5865
E-mail: info@buhler.com
www.farm-king.com

Equipment shown is subject to change without notice.
©2010 BuhlerTrading Inc. Printed in USA. TSX:BUI

bühler | *a division of Buhler Industries Inc.*