

Farm King

OPERATOR AND PARTS MANUAL

Snowblower

Model 1080

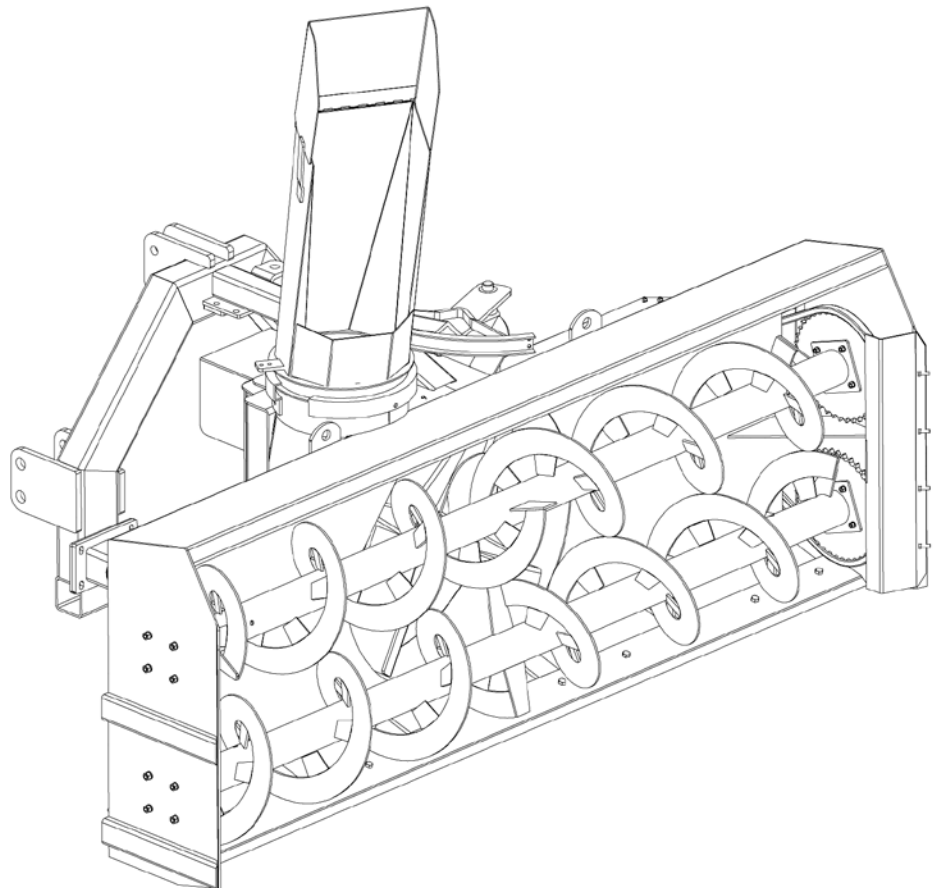


Table of Contents

Introduction	4
Safety.....	5
• Safety	5
• General Safety	6
• Start-up Safety	6
• Operation Safety	6
• Transport Safety	6
• Service and Maintenance Safety	7
• Storage Safety	7
• Safety Signs	8
• Safety Sign Installation	8
Assembly.....	9
• Assembly Instructions	9
Operation	11
• Theory of Operation	12
Bolt Torque	13
• Checking Bolt Torque	13
Parts Drawings.....	15
• Snowblower Drawings	15
• Snowblower Parts List.....	18
• Snowblower PTO Drawing.....	22
• Snowblower PTO Parts List.....	23
Shipping Kit and Bundle Numbers	24
Warranty	26

Manufacturer's statement: for technical reasons Buhler Industries Inc. reserves the right to modify machinery design and specifications provided herein without any preliminary notice. Information provided herein is of descriptive nature. Performance quality may depend on soil fertility, applied agricultural techniques, weather conditions and other factors.

Introduction

Farm King has years of snowblower manufacturing expertise and thousands of acreages, farms and cities depend on Farm King snowblowers. PTO-driven Farm King Snowblowers attach to a 3-point hitch. A hitch system, which is quick-hitch compatible, is standard on all models. This model is supplied with Category 2 pins, as well as conversion bushings to Category 3.

A 7' or 10' commercial truck loader chute is available as an option. Adjustable cup type skid shoes are standard on all models. This model has a 4 blade fan and Hydraulic Spout Control as standard equipment.

There is a shear bolt on the drive shaft and on the PTO shaft to protect the machine from damage if a large object is picked up. Any smaller objects in the snow will be thrown with it and could cause serious injury. Do not allow anyone to stand behind the tractor or in the area of the discharged snow.

Keep this manual handy for frequent reference. All new operators or owners must review the manual before using the equipment and at least annually thereafter. Contact your Farm King Dealer if you need assistance, information, or additional copies of the manual. Visit our website at www.buhlerindustries.com for a complete list of dealers in your area.

The directions left, right, front and rear, as mentioned throughout this manual, are as seen facing in the direction of travel of the implement.

Safety

Safety Instructions

Remember, YOU are the key to safety. Good safety practices not only protect you, but also the people around you. Make these practices a working part of your safety program. Be certain that everyone operating this equipment is familiar with the recommended operating and maintenance procedures and follows all the safety precautions. Most accidents can be prevented. Do not risk injury or death by ignoring good safety practices.

The alert symbol is used throughout this manual. It indicates attention is required and identifies hazards. Follow the recommended precautions.



The safety alert symbol means...
ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED!



CAUTION

The caution symbol indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



WARNING

The Warning Symbol indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury, and includes hazards that are exposed when guards are removed. It may also be used to alert against unsafe practices.



DANGER

The Danger Symbol indicates an imminently hazardous situation that, if not avoided will result in death or serious injury. This signal word is to be limited to the most extreme situations, typically for machine components that, for functional purposes, cannot be guarded.

General Safety Instructions

- Have a first-aid kit available for use and know how to use it.
- Have a fire extinguisher available, stored in a highly visible location, and know how to use it.
- Wear appropriate protective gear. This list may include but is not limited to:
 - hard hat
 - protective shoes with slip resistant soles
 - protective glasses or goggles
 - heavy gloves
 - wet weather gear
 - hearing protection
 - respirator or filter mask
- Read and understand the Operator's Manual and all safety signs before operating, servicing, adjusting, repairing, or unplugging the equipment.
- Do not attempt any unauthorized modifications to your Farm King product as this could affect function or safety, and could affect the life of the equipment.
- Never start or operate the snowblower except from the operator's station on the power unit.
- Inspect and clean the working area before operating.
- Keep hands, feet, clothing, and hair away from moving parts.
- Ensure bystanders are clear of the area before operating.

Start-Up Safety

- Do not let inexperienced operators or children run this equipment.
- Place all tractor and machine controls in neutral before starting.
- Operate only with ROPS and seatbelt equipped tractors.
- Do not operate inside a building unless there is adequate ventilation.
- Ensure all shields are in place and in good condition before operating.
- Stay clear of PTO shaft and machine when engaging PTO.

Operation Safety

- Do not permit riders.
- Do not wear loose fitting clothing during operation.
- Never operate equipment in the raised position.

Transport Safety

- Review Transport Safety instructions in tractor manual before moving.
- Check with local authorities regarding transport on public roads. Obey all applicable laws and regulations.
- Make sure the SMV (Slow Moving Vehicle) emblem and all the lights and reflectors that are required by the local highway and transport authorities are in place, are clean, and can be seen clearly by all overtaking and oncoming traffic.
- Never have the equipment in operation during transport.
- Always travel at a safe speed.

Service and Maintenance Safety

- Stop engine, set brake, remove ignition key, and wait for all moving parts to stop before servicing, adjusting, repairing, or unplugging.
- Support the equipment with blocks or safety stands before working beneath it.
- Follow good shop practices including:
 - keep service area clean and dry
 - be sure electrical outlets and tools are properly grounded
 - use adequate light for the job.
- Use only tools, jacks, and hoists of sufficient capacity for the job.
- Replace and secure all shields removed during servicing before operating.
- Use heavy leather gloves to handle sharp objects.
- Check hydraulics regularly for leaks. Use cardboard to look for leaks, and use hand and eye protection.
- Relieve pressure on hydraulic system before repairing or adjusting.

Storage Safety


- Store the unit in an area away from human activity.
- Do not permit children to play on or around the stored machine.
- Support the frame on stands and blocks to provide a secure base.

Safety Signs


- The following illustration shows the approximate location and detail of safety signs.
- Keep all safety signs clean and legible and replace any that are damaged or missing.
- When original parts are replaced, any safety signs affixed to those parts should be replaced as well. Replacement safety signs are available from your local dealer.

Installation

- To install safety signs, ensure the installation area is clean and dry. Decide on the exact position before you remove the backing paper. Remove the smallest portion of the split backing paper and align over the specified area. Carefully press in place.
- Slowly peel back the remaining paper and smooth the remaining portion in place. Small air pockets can be pierced with a pin and smoothed out.

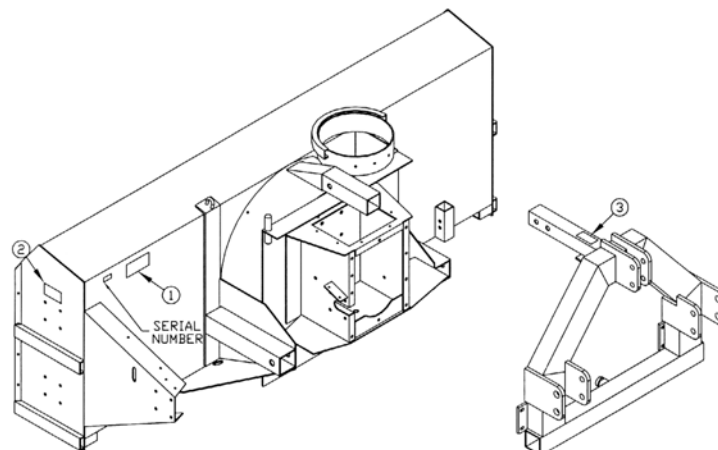

- Replace safety signs immediately should they become damaged, torn or illegible. Obtain replacements from your authorized dealer using the part numbers shown.

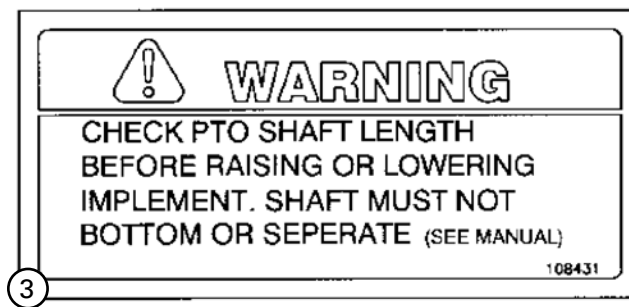

Assembly Instructions

1. **Hitch Assembly:** With lower hitch tubes (#3) turned as shown in drawing, slide them into the sleeves welded to the main body. These tubes are adjustable to two different positions. The correct position for each individual tractor will be determined when mounting the snowblower on the tractor (see Section 4). Start with the tubes pulled out to the last hole. These tubes are connected to the snowblower with a 1-1/4" x 5-1/2" pin (#6) and a hairpin clip (#12). Slide the 3-point hitch (#2) into the top sleeve on the snowblower body and hold in place with a 1" x 4-3/8" pin (#7) and a hairpin clip (#12). Bolt the bottom of the hitch to the ends of the hitch tubes using 1/2" x 2" hex bolts, lock washers, flat washers and hex nuts.
2. **Spout Assembly:** Mount the discharge spout (#64 or #73) using the spout clamp (#22) bolted to the spout ring on the snowblower. Lubricate the spout ring and clamp. Mount the 5" stroke cylinder (#68) on the spout as shown in the drawing.



CAUTION

The ports in the cylinder are both 9/16" ORB. Be sure that the bottom edge of the deflectors are properly fitted in the guides before using the hydraulic control.

3. **Hydraulic Spout Swivel:**
 - Bolt the cylinder arm base (#17) to the bottom of the hitch using 5/8" x 2" hex bolts, lock washers and hex nuts. **NOTE:** There are three sets of holes. The hole used to bolt on this base must match with the holes used to assemble the hitch in the hitch tubes (i.e. 1st hole, second hole, etc.)
 - Mount the spout swivel (#16) onto the swivel pin welded to the back corner of the fan housing using a 1-1/4" I.D. flat washer (#31) and a 1/4" x 2" cotter pin (#32).
 - Wrap cable (#18) around spout and clamp to the ends of the swivel using 3/8" cable clamps (#19).
 - With the spout turned forward and the swivel arm centered with the spout, clamp the cable to the spout cable anchor using another cable clamp. Ensure that the spout is not jammed and that there is no slack in the cable.
 - Use a standard 8" stroke cylinder (20-1/4" min., 28-2" max. pin centers).
4. **Mounting Snowblower on Tractor:**
 - Mount the snowblower on a tractor with a Category 2 or 3 standard hitch or a Category 3 quick hitch. The hitch has two holes both at the top of the hitch and at each lift arm. When using a quick hitch, the pins must be in the inside set of holes. Use the outside set of holes with a standard three-point hitch. The lift arm pins also have a narrow spacing for Category 2 and a wide spacing for Category 3.
 - Using tape or a bright colored marking pen, mark on the outer shields of the PTO the position where the shaft is completely pushed together and the position where you have a 4" overlap. Watch these marks when moving the snowblower through all possible operating angles to see that the PTO shaft stays within this range. Slide the hitch in if necessary to keep the PTO shaft in this operating range. Do not forget to change the position of the cylinder arm (#17) by the same distance that you move the hitch.

- With the tractor engine shut off, attach the PTO shaft. The tractor end has a 1-3/8" 21 spline end with a spring loaded locking collar. The snowblower end has a clamp style yoke with a 3/8" keyway. Slide the yoke onto the 1-3/4" jackshaft with the 3/8" key supplied. Lock the yoke in place with the 5/8" x 3-1/4" bolt and lock nut fitted through the groove in the gearbox shaft. After tightening the bolt, insert and tighten the 3/8 socket set screw supplied.
- Always check to see that both ends of the PTO shaft are securely attached every time the snowblower is used. This should always be done with the tractor engine off.

Operation Instructions

1. Do not operate the snowblower in the fully raised position. The 3-point hitch on some tractors raises high enough to cause the PTO shaft to bind. This can cause damage to the PTO shaft and/or to the hitch and pins.
2. Depth of cut can be partially controlled by tilting the snowblower forward or backward. Adjust the top link of the tractor hitch so the snowblower is just slightly tilted back when resting on the ground.



CAUTION

Excessive backward tilt may cause the "U" joints to flutter resulting in PTO shear bolt failure.

3. Adjust the lower link sway chains or blocks on the tractor to restrict side movement of the snowblower when operating.
4. The snowblowers may be purchased with either of two available spouts. Both spouts have hydraulically controlled spout deflectors. The standard spout should be suitable for all general snow blowing applications. The truckloader spout was designed to blow directly onto the back of a truck. The maximum height of the truck side you blow over should be approximately 10 ft.
5. Run the snowblower at low RPM to check operation before blowing snow.
6. The snowblower has shear bolts to protect the tractor and snowblower in case a large object enters the snowblower. The PTO shaft uses two - 3/8" x 1" (Grade 2) hex bolts as shear bolts. The drive shaft uses one - 5/16" x 1-1/4" (Grade 5) hex bolt as a shear bolt. Shear bolts should be fastened with a lock nut. These bolts must be kept tight to prevent wear of the bolt and bolt holes.
7. Never run PTO shaft over 1000 rpm.
8. Chain Tension: Slack on the lower side of the chain should be 3/8" to 1/2".
9. Lubrication:
 - The spout clamps and rings should be periodically lubricated with gun grease. This is particularly important on the truckloader spout which turns harder than the standard spout due to length and weight.
 - PTO shaft universal joints and square shaft slide should be greased daily.
 - Regularly oiling the chain will significantly increase the life of the chain.
 - The grease fitting on the hydraulic spout swivel arm should be kept lubricated.
 - Use only 80-90 gear oil on multi grade with 80 minimum in the gearbox up to the level plug height.

10. Periodically check all bolts for tightness. The bolt holding on the fan and the bearing bolts are of particular importance.



DANGER

Always stop snowblower for servicing or unplugging. The PTO should be disengaged before dismounting from the tractor.


11. Shear Sprocket: The shear sprocket (#52) should be checked at the beginning of every season to make sure it will spin freely. Clean to loosen if necessary.
12. When replacing bearings or tightening a loose bearing collar, always tighten collar in the direction of shaft rotation using a center punch or a similar tool.



CAUTION

Avoid raising or lowering snowblower under load. Doing so can create excessive end pressure on the PTO shaft which could lead to bearing failure on the snowblower.


Theory of Operation

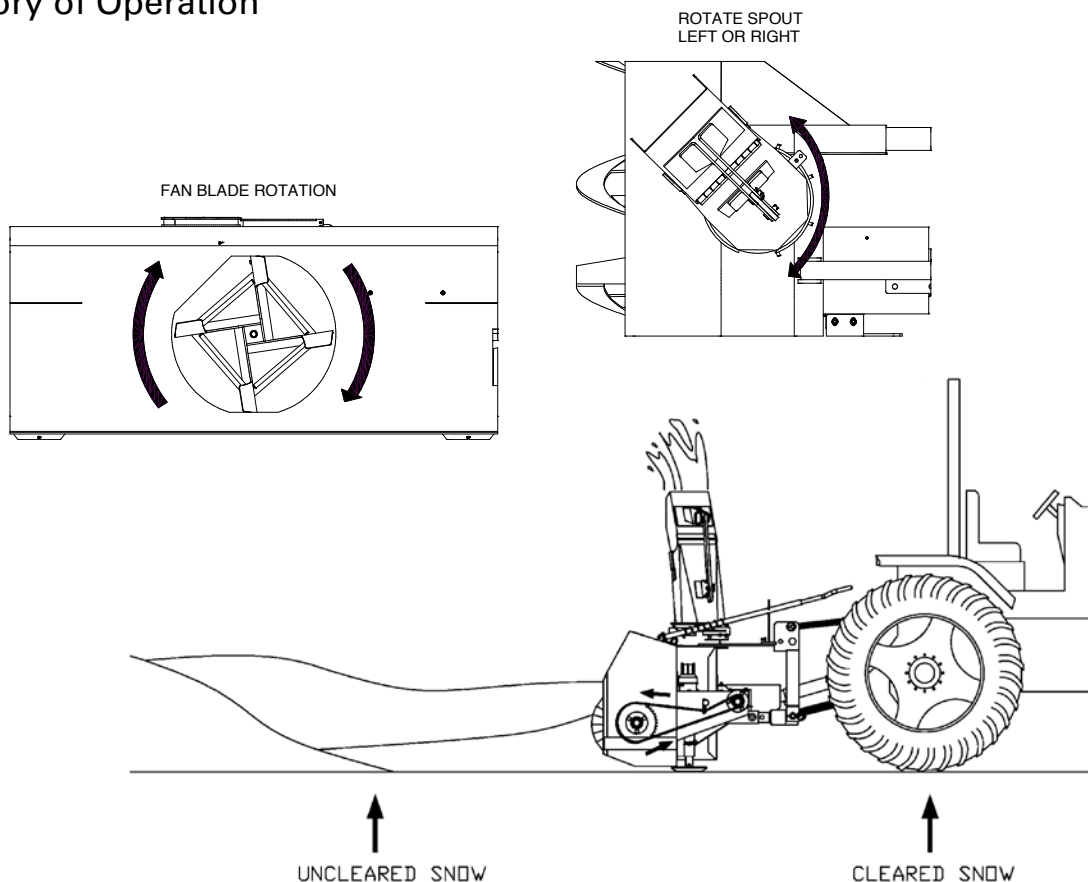

Bolt Torque

Checking Bolt Torque

 The tables shown below give correct torque values for various bolts and hex bolts. Tighten all bolts to the torques specified in chart unless otherwise noted. Check tightness of bolts periodically, using bolt torque chart as a guide. Replace hardware with the same strength bolt.

Bolt Torque*						
						
Bolt Diameter	Grade 2 Bolts		Grade 5 Bolts		Grade 8 Bolts	
(inches)	SAE 2		SAE 5		SAE 8	
"A"	(lb-ft)	(N.m)	(lb-ft)	(N.m)	(lb-ft)	(N.m)
0.25 (1/4)	6	8	9	12	12	17
0.313 (5/16)	10	13	19	25	27	36
0.375 (3/8)	20	27	33	45	45	63
0.438 (7/16)	30	42	53	72	75	100
0.5 (1/2)	45	61	80	110	115	155
0.563 (9/16)	70	95	115	155	165	220
0.625 (5/8)	95	128	160	215	220	305
.75 (3/4)	165	225	290	390	400	540
0.875 (7/8)	170	230	420	570	650	880
1	225	345	630	850	970	1320

Torque figures indicated above are valid for non-greased or non-oiled threads and heads unless otherwise specified. Therefore, do not grease or oil bolts or hex bolts unless otherwise specified in this manual. When using locking elements, increase torque values by 5%.


*Torque value for bolts and hex bolts are identified by their head markings.

Hydraulic Fittings					
Dash Size	Thread Size	Jam Nut or Straight ORB Fitting Torque		SAE 37° (JIC) Swivel Nut Torque	
		(lbs-ft)	(NM)	(lbs-ft)	(NM)
-4 (1/4)	7/16-20	16 - 14	20 - 22	11 - 10	13 - 15
-5 (5/16)	1/2-20	20 - 18	24 - 27	15 - 13	18 - 20
-6 (3/8)	9/16-18	26 - 24	33 - 35	19 - 17	23 - 26
-8 (1/2)	3/4-16	60 - 50	68 - 78	38 - 34	47 - 52
-10 (5/8)	7/8-14	80 - 72	98 - 110	56 - 50	69 - 76
-12 (3/4)	1-1/16-12	135 - 125	170 - 183	78 - 70	96 - 106
-14 (7/8)	1-3/16-12	180 - 160	215 - 245	90 - 80	110 - 122
-16 (1)	1-5/16-12	220 - 200	270 - 300	104 - 94	127 - 141
-20 (1 1/4)	1-5/8-12	280 - 210	285 - 380	138 - 124	169 - 188
-24 (1 1/2)	1-7/8-12	360 - 270	370 - 490	173 - 156	212 - 235


Prevailing Torque Lock Nuts				
Nut Size and Threads per Inch	Grade B Nuts		Grade C Nuts	
	Nut Tightening Torque		Nut Tightening Torque	
	(lbs-ft)	(NM)	(lbs-ft)	(NM)
Coarse Thread				
1/4 - 20	7 - 5	7 - 9	10 - 7	9 - 14
3/16 - 18	12.5 - 9	12 - 17	16 - 11	15 - 22
3/8 - 16	20 - 14.5	20 - 27	28 - 20	27 - 38
7/16 - 14	32 - 23	31 - 43	43 - 31	42 - 58
1/2 - 13	50 - 37	50 - 68	62.5 - 45	61 - 85
9/16 - 12	70 - 50	68 - 95	95 - 70	95 - 129
5/8 - 11	95 - 70	95 - 129	122.5 - 90	122 - 166
3/4 - 10	165 - 125	169 - 224	210 - 155	210 - 285
7/8 - 9	250 - 185	251 - 339	312.5 - 225	305 - 423
1 - 8	375 - 275	373 - 508	462.5 - 360	488 - 627
Fine Thread				
1/4 - 28	7.5 / 5.5	7 - 10	10 - 7	9 - 14
3/16 - 24	13 - 10	14 - 18	17 - 12	16 - 23
3/8 - 24	22 - 16	22 - 30	29 - 21	28 - 39
7/16 - 20	34 - 24	33 - 46	43 - 31	42 - 58
1/2 - 20	52.5 - 37.5	51 - 71	70 - 50	68 - 95
9/16 - 18	77.5 - 57.5	78 - 105	95 - 70	95 - 129
5/8 - 18	97.5 - 72.5	98 - 132	125 - 90	122 - 169
3/4 - 16	165 - 120	163 - 224	210 - 155	210 - 285
7/8 - 14	270 - 200	271 - 266	312.5 - 225	305 - 423
1 - 14	400 - 300	407 - 542	500 - 362.5	491 - 678

1) For Grade A locknut torque specifications refer to Grade B specifications.


Snowblower Drawings

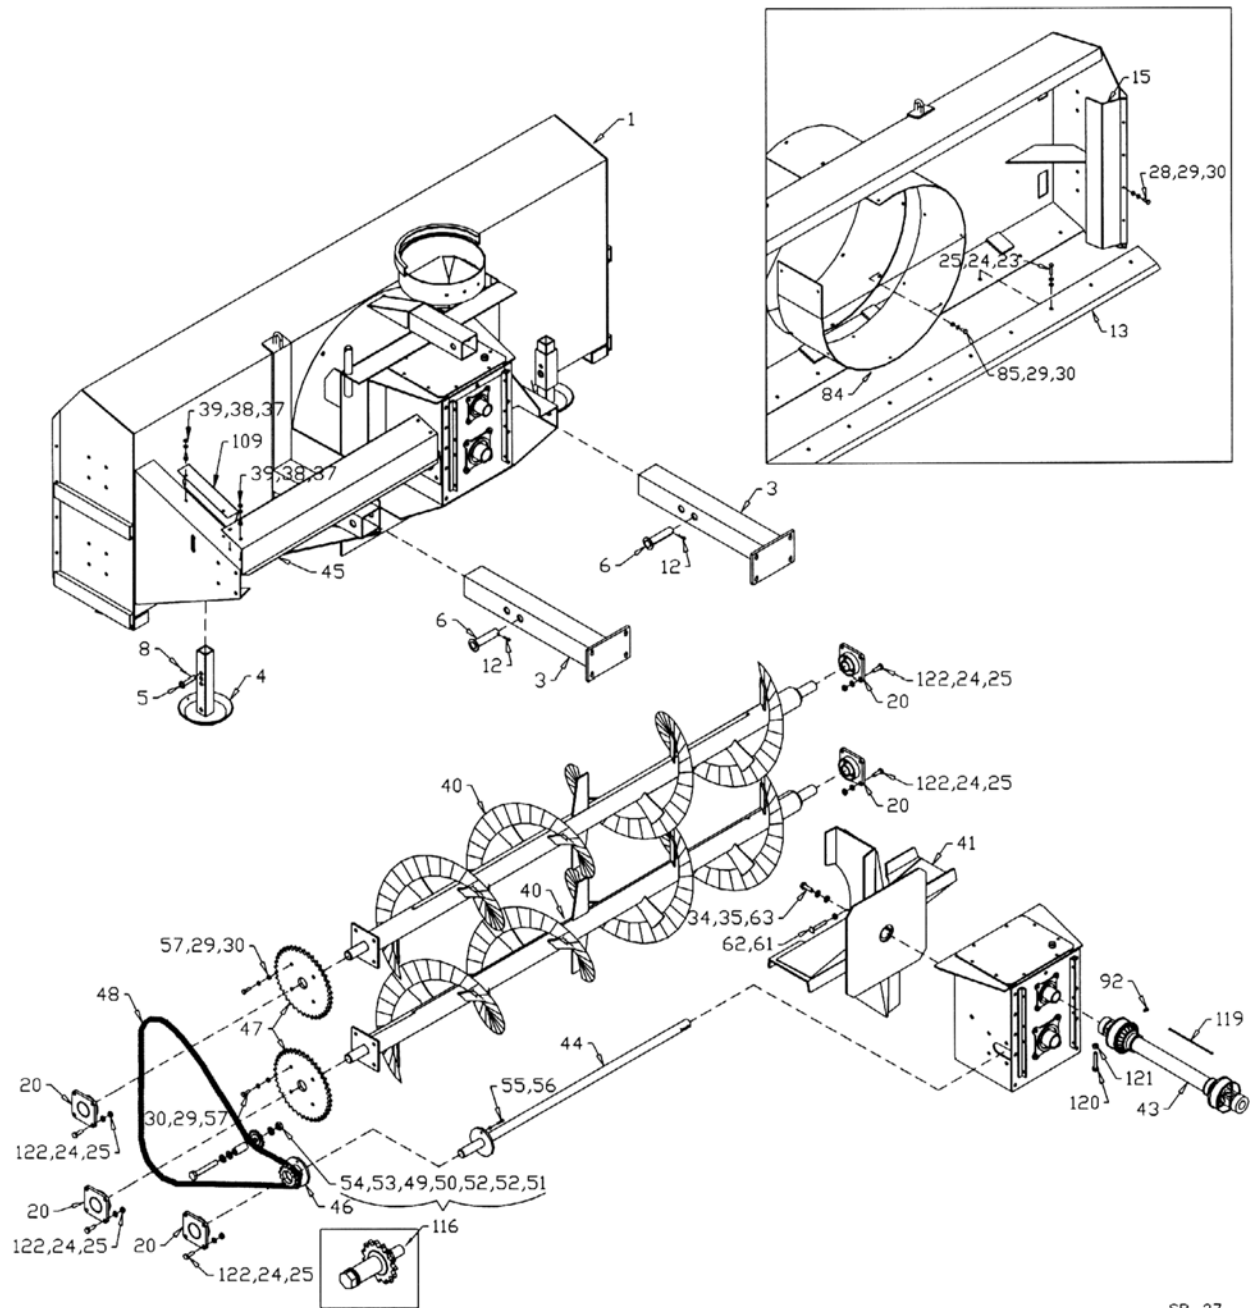

SB-27

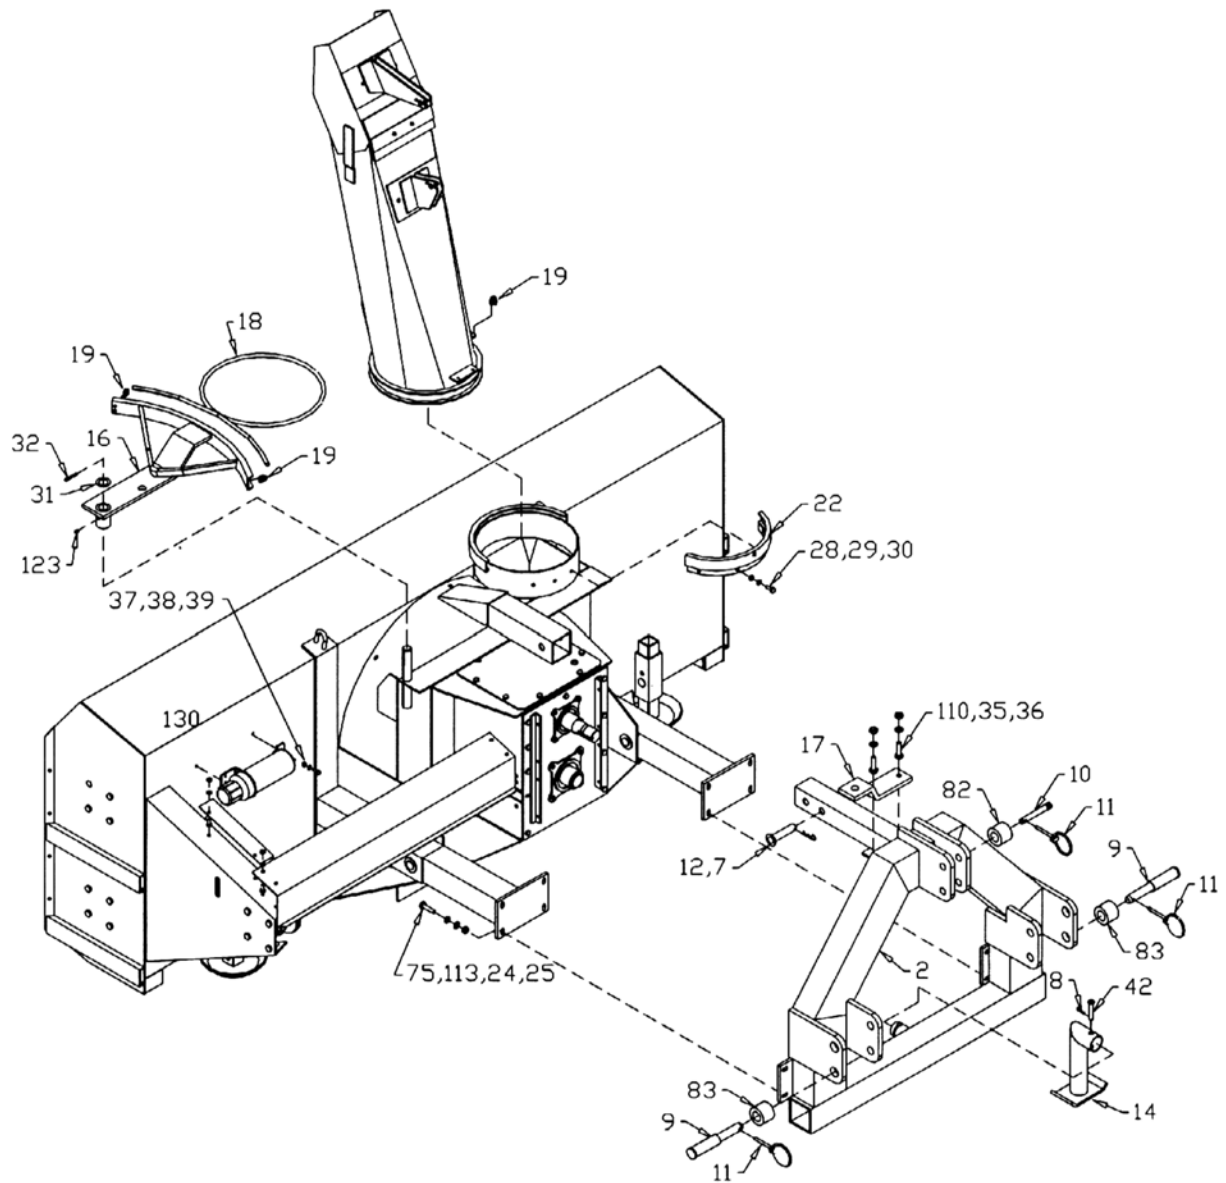

SB-28

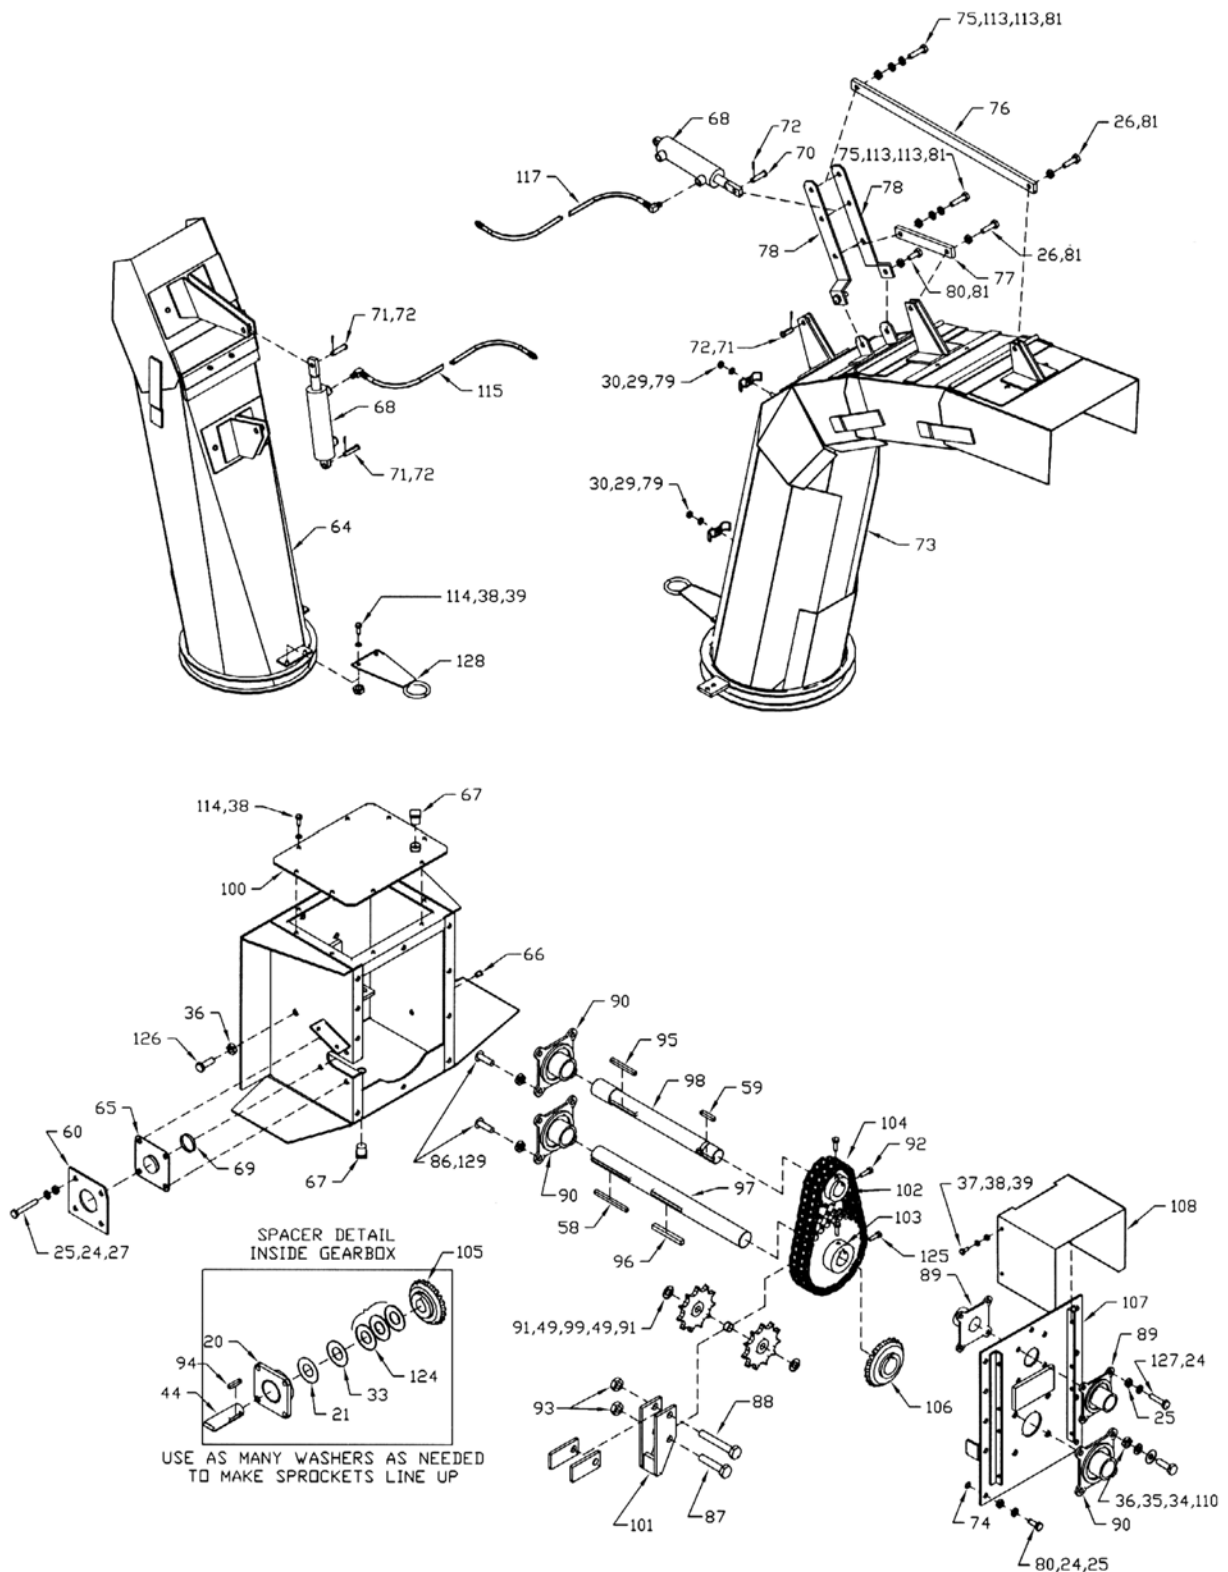

SB-29

When Ordering Parts

Always give your dealer the Model, Color and Serial Number of your machine to assist him in ordering and obtaining the correct parts. Use the exploded view and tabular listing of the area of interest to exactly identify the required part.


Item	Part Number	Description
1	906491	Main Body Weldment
2	F9244	3-Point Hitch Weldment (902129)
3	965307	Lower Hitch Tube (4" SQ. x 29 1/2")
4	902407	Skid Plate Weldment
	F6707	Skid Plate Bundle
5	900712	Skid Pin
6	965205	Lower Hitch Tube Pin (1-1/4" x 5-1/2")
7	965206	Upper Hitch Tube Pin (1" x 4-3/8")
8	961012	#16 Hair Pin Clip
9	967461	Lift Pin Cat 2-3
10	965910	Top Lift Pin (Cat.2)
11	965911	7/16" Linch Pin
12	12779	#9 Hair Pin Clip
13	965209	Cutting Edge
14	965308	Jack Stand
15	965211	Chain Guard
16	965302	Hydraulic Swivel Arm
17	965213	Cylinder Arm Base
18	965654	3/8" x 80" Cable
19	964264	3/8" Cable Clamp
20	968632	1-1/2" Housing w/ Bearing - 4 Bolt
21	9812443	1-1/2" x 18GA Narrow Rim Washer
22	965215	Spout Clamp
23	967475	1/2" x 1-3/4" Fl Hd Bolt (skt) (pl)
24		1/2" Lock Washer (pl)
25		1/2" Hex Nut (pl)
26		1/2" x 1-3/4" Hex Bolt (pl)
27		1/2" x 3-1/4" Hex Bolt (pl)
28		3/8" x 1" Hex Bolt (pl)
29		3/8" Lock Washer (pl)
30		3/8" Hex Nut (pl)
31		1-1/4" x 10GA Narrow Rim Washer (pl)
32	81210	1/4" x 2" Cotter Pin (pl)
33		1-1/2" x 14GA Narrow Rim Washer
34		5/8" BS Flat Washer (pl)
35		5/8" Lock Washer (pl)

Item	Part Number	Description
36		5/8" Hex Nut (pl)
37		5/16" x 3/4" Hex Bolt (pl)
38		5/16" Lock Washer (pl)
39		5/16" Hex Nut (pl)
40		Auger (15" O.D. x 107-3/8" Long)
41	965217	4-Blade Fan Weldment
42	965294	Jack Stand Pin
43	F9231	Standard PTO (1-3/8" x 21 spline)
	F9232	Optional PTO (1-3/4" x 20 spline)
44	965280	Drive Shaft
45	965281	Drive Shaft Guard
46	965221	Shear Sprocket (13T, #80)
47	965222	Flighting Sprocket (40T, #80)
48	965282	Roller Chain (#80 x 109 link w/ Connector & Offset)
	965273	#80 Offset Link only
49	965224	Idler Sprocket (11T, #80, 3/4" bore)
50	965225	Idler Spacer (1-1/4" O.D. x 3/4" I.D. x 2-5/16"Lg)
51		3/4" x 5" Hex Bolt (pl)
52		3/4" B.S. Flat Washer (pl)
53		3/4" Lock Washer (pl)
54		3/4" Hex Nut (pl)
55		5/16" x 1-1/4" GR. 5 Hex Bolt (pl)
56		5/16" Lock Nut (pl)
57		3/8" x 1-1/2" Hex Bolt (pl)
58	965226	Fan Key (3/8" x 3/8" x 5")
59	968807	PTO Key (3/8" x 3/8" x 2")
60	965296	Bearing Spacer
61	963030	1/2" x 3" Sq. Hd. Set Screw (pl)
62	984077	1/2" Jam Nut (pl)
63		5/8" x 1-3/4" Hex Bolt (pl)
64	F9241	Standard Spout Weldment
65	965647	1-1/2" Oil Seal Plate
66	967451	1/2" Solid Pipe Plug
67	967452	1" Solid Pipe Plug
68	24930	Cylinder 1.75DIA x 5.0 - 9/16" ORB
69	967453	Oil Seal (CR #15142)
70	960913	1/2" x 1-13/16" Clevis Pin (pl)
71	961876	1/2" x 1-1/2" Clevis Pin (pl)
72	9812430	1/8" x 1" Cotter Pin (pl)
73	F9243	Truckloader Spout Assembly 10' (965306 - Weldment)
	F9234	Truckloader Spout Assembly 7' (965309 - Weldment)

Item	Part Number	Description
74	82111	#111 O-Ring
75		1/2" x 2" Hex Bolt (pl)
76	965304	Spout Link - 28-1/8"
77	965305	Spout Link - 8-3/4"
78	965238	Cylinder Arm
79	965239	Hose Clamp
80		1/2" x 1-1/4" Hex Bolt (pl)
81		1/2" Lock Nut (pl)
82	965266	CAT. 2-3 Top Link Pin Bushing
83	965267	CAT. 2-3 Lift Arm Bushing
84	965268	Fan Housing Liner
85	967431	3/8" x 1" Flat Head Bolt (pl)
86	905609	5/8" x 2-1/4" Flat Head Bolt (pl)
87		3/4" x 3-1/2" Hex Bolt (pl)
88	905630	3/4" x 5" Idler Bolt
89	906497	1-3/4" Housing w/ Bearing (Ductile)
	965283	1-3/4" Bearing w/ Collar
	906498	1-3/4" Ductile Housing Only
90	906499	2" Housing w/ Bearing (Ductile)
	967375	2" Bearing w/ Collar
	906500	2" Ductile Housing Only
91	84050	3/4" S.A.E. Flat Washer (pl)
92	985639	3/8"Dia x 1/2" Socket Set Screw
93		3/4" Lock Nut (pl)
94	965821	3/8" x 1-3/4" Key
95	965284	3/8" x 3-3/4" Key
96	965285	1/2" x 4-1/2" Key
97	965286	Fan Shaft (2" x 23")
98	965667	Jack Shaft (2"/1-3/4" x 18-3/4")
99	965288	Idler Sprocket Spacer
100	965660	Gearbox Cover
101	965290	Chain Tightener Weldment
102	965269	Sprocket 15T, #80 DBL, 1-3/4" B
103	965270	Sprocket 28T, #80 DBL, 2" B
104	965271	Chain (#80 Dbl x 40 link w/ Connector)
105	965275	Gear 22T, 1-1/2" Bore
106	965274	Gear 22T, 2" Bore
107	906496	Gearbox Front Cover Plate
108	965655	PTO Guard
109	965295	Idler Shield
110		5/8" x 2" Hex Bolt (pl)

Item	Part Number	Description
113		1/2" BS Flat Washer (pl)
114		5/16" x 1" Hex Bolt (pl)
115	115370	3/8" x 114" Hose w/ 90 Degree Elbow
116	905080	Idler Assembly - Parts Only
117	115371	3/8" x 156" Hose w/ Fittings
	115369	3/8 x 156 Hose 1/2 MNPT x 9/16 SWFJIC
	811918	Elbow 90deg 9/16 SWMORB x 9/16 MJIC
	886786	Elbow 90deg 1/4" MNPT x 9/16" MJIC
119	936402	PTO Safety Chain
120		5/8" x 3-1/4" Hex Bolt (pl)
121		5/8" Lock Nut (pl)
122		1/2" x 1-1/2" Hex Bolt (pl)
123	967164	Pound-In Grease Fitting
124	967135	1-1/2" x 10GA Narrow Rim Washer (pl)
125	967464	3/8" x 1-1/4" Sq Hd Set Screw
	968898	5/8" x 4" Sq Hd Set Screw (1000 RPM)
127		1/2" x 2-1/4" Hex Bolt (pl)
128	907590	Spout Hose Holder
129		5/8" Lock Nut (pl)
130	909277	Manual Holder

Snowblower PTO Drawing

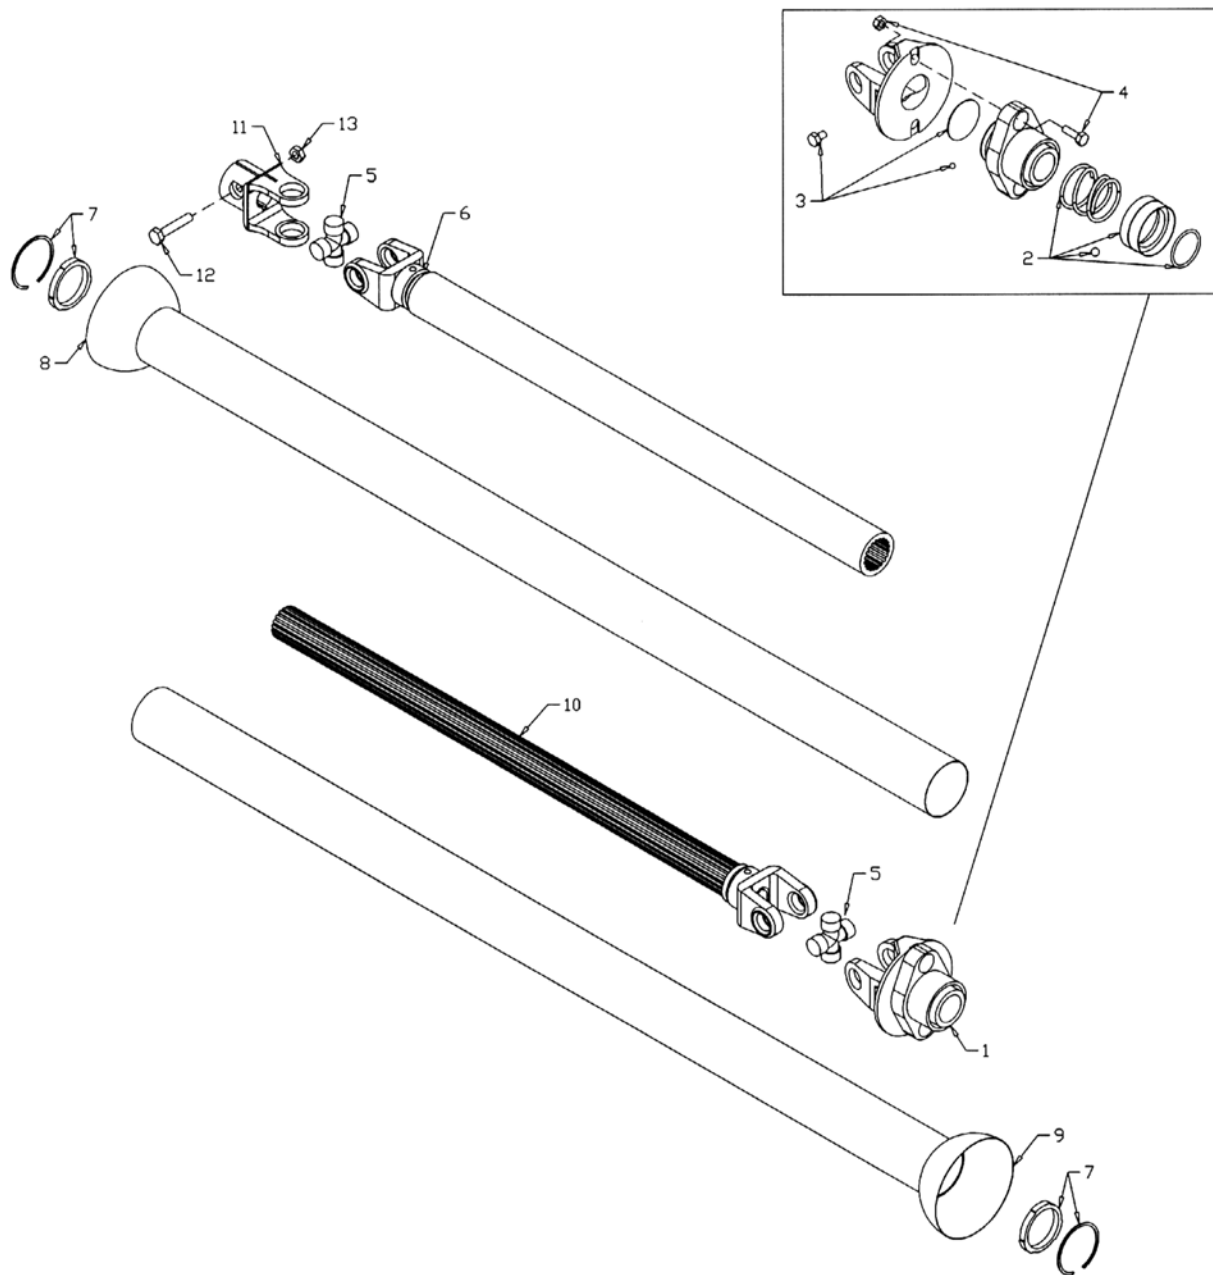

SB-32

Item	Part Number	Description
	F9231	Standard Shaft (21 Spline, 1-3/8") - 1000 RPM
	F9232	Optional Shaft (20 Spline, 1-3/4") - 1000 RPM
1	936413	Standard Shear Assembly (21 Spl, 1-3/8")
	936422	Shear Hub Only (21 Spl, 1-3/8")
	936414	Optional Shear Assembly (20 Spl, 1-3/4")
	936423	Shear Hub Only (20 Spl, 1-3/4")
	936424	Shear Hub Only (6 Spl, 1-3/8")
	936428	Shear Yoke Only (All Sizes)
2	936415	Safety Slide Lock Repair Kit (20 Spl, 1-3/4")
	936199	Safety Slide Lock Repair Kit (7 & 21 Spl, 1-3/8")
3	936249	Shear Assy Repair Kit
4	908890	Shear Bolt - 3/8" x 1" (Gr.2) - 1000 RPM (Pack of 10)
5	936197	Repair Kit (Option)
	906548	Extended Life Repair Kit (Std)
6	936426	Yoke & Tube (Splined)
7	936417	Bearing & Snap Ring Kit
8	936418	Inner Guard
9	936419	Outer Guard
10	936425	Yoke & Shaft (Splined)
11	936421	Clamp Yoke
12	967433	5/8" x 3-1/4" Bolt
13	812482	5/8" Lock Nut

Shipping Kit and Bundle Numbers

The following is a list of Kit Numbers for this product and the Bundle Numbers, Descriptions, and Quantities for each Kit.

Quantity	Bundle Number	Description
Y1080C - 1000 rpm with Standard Spout		
1	F9244	Hitch
1	F9241	Standard Spout
1	F0198	Body Assembly
1	F0560	Deflector Cylinder & Hose Kit
1	F9231	PTO 1000 rpm (1-3/8" x 21 spline)

Y1080CT - 1000 rpm with Truckloader Spout		
1	F9244	Hitch
1	F9243	Truck Loader Spout
1	F0198	Body Assembly
1	F9118	Deflector Cylinder & Hose Kit
1	F9231	PTO 1000 rpm (1-3/8" x 21 spline)

Optional Bundle Numbers

The following is a list of options available for the Kits listed above.

Quantity	Bundle Number	Description
1	F9116	Swivel Arm Cylinder & Hose Kit
1	F9232	1000 rpm PTO (1-3/4" x 20 spline)
1	F9233	540 rpm PTO (1-3/8" x 6 spline)
1	Y907	7' Truckloader Spout c/w Cylinder & Hoses
1	Y910	10' Truckloader Spout c/w Cylinder & Hoses

Farm King Limited Warranty

This document limits your warranty rights.

Base Limited Warranty

Buhler Industries Inc. provides this warranty only to original retail purchasers of its product. Buhler Industries Inc. warrants to such purchasers that all Buhler Industries Inc. manufactured parts and components used and serviced as provided for in the Operator's Manual shall be free from defects in materials and workmanship for a period following delivery to the original retail purchaser of 12 months (80 days for commercial applications). This limited warranty applies only to those parts and components manufactured by Buhler Industries Inc. Parts and components manufactured by others are subject to their manufacturer's warranties, if any.

Buhler Industries Inc. will fulfill this limited warranty by, at its option, repairing or replacing any covered part that is defective or is the result of improper workmanship, provided that the part is returned to Buhler Industries Inc. within thirty (30) days of the date that such defect or improper workmanship is, or should have been, discovered. Buhler Industries Inc. reserves the right to either inspect the product at the buyer's location or have it returned to the factory for inspection. Parts must be returned through the selling representative and the buyer must prepay transportation charges.

Buhler Industries Inc. will not be responsible for repairs or replacements that are necessitated, in whole or part, by the use of parts not manufactured by or obtained from Buhler Industries Inc. Under no circumstances are component parts warranted against normal wear and tear. There is no warranty on product pump seals, product pump bearings, rubber product hoses, pressure gauges, or other components that require replacement as part of normal maintenance. Also: Buckets and Bucket Tines carry no warranty, Bent Spears carry no warranty, Snowblower Fan Shafts carry no warranty, Mower Blades carry no warranty, Portable Auger Parts Have Two (2) Year Warranty, Loader Parts Have Two (2) Year Warranty. The purchaser is solely responsible for determining suitability of goods sold. This warranty is expressly in lieu of all other warranties expressed or implied. Buhler Industries Inc. will in no event be liable for any incidental or consequential damages whatsoever. Nor for any sum in excess of the price received for the goods for which liability is claimed.

Repair Parts Limited Warranty

Buhler Industries Inc. warrants Farm King replacement parts purchased after the expiration of the Buhler Industries Inc. Limited Warranty, and used and serviced as provided for in the Operator's Manual, to be free from defects in materials or workmanship for a period of thirty (30) days from the invoice date for the parts. Buhler Industries Inc. will fulfill this limited warranty by, at its option, repairing or replacing any covered part that is defective or is the result of improper workmanship, provided that the part is returned to Buhler Industries Inc. within thirty (30) days of the date that such defect or improper workmanship is, or should have been, discovered. Such parts must be shipped to Buhler Industries Inc. at the purchaser's expense.

What is Not Covered

Under no circumstances does this limited warranty cover any components or parts that have been subject to the following: negligence; alteration or modification not approved by Buhler Industries Inc.; misuse; improper storage; lack of reasonable and proper maintenance, service, or repair; normal wear; damage from failure to follow operating instructions; accident; and/or repairs that have been made with parts other than those manufactured, supplied, and or authorized by Buhler Industries Inc.

Authorized Dealer and Labor Costs

Repairs eligible for labor under this limited warranty must be made by Buhler Industries Inc. or an authorized Farm King dealer. Buhler Industries Inc. retains the exclusive discretion to determine whether it will pay labor costs for warranty repairs or replacements, and the amount of such costs that it will pay and the time in which the repairs will be made. If Buhler Industries Inc. determines that it will pay labor costs for warranty work, it will do so by issuing a credit to the dealer's or distributor's account. Buhler Industries Inc. will not approve or pay invoices sent for repairs that Buhler Industries Inc. has not previously approved. Warranty service does not extend the original term of this limited warranty.

Warranty Requirements

To be covered by warranty, each Farm King new product must be registered with Buhler Industries Inc. within thirty (30) days of delivery to original retail purchaser. If the customer decides to purchase replacement components before the warranty disposition of such components is determined, Buhler Industries Inc. will bill the customer for such components and then credit the replacement invoice for those components later determined to be covered by this limited warranty. Any such replacement components that are determined not be covered by this limited warranty will be subject to the terms of the invoice and shall be paid for by the purchaser.

Warranty Claims:

Warranty requests must be prepared on Buhler Industries Inc. Warranty Claim Forms with all requested information properly completed. Warranty Claims must be submitted within a thirty (30) day period from date of failure repair.

Warranty Labor:

Any labor subject to warranty must be authorized by Buhler Industries Inc. The labor rate for replacing defective parts, where applicable, will be credited at 100% of the dealer's posted shop rate. Defective parts will receive an extra 10% discount to assist with freight or other incidental costs.

Exclusive Effect of Warranty and Limitation of Liability

TO THE EXTENT PERMITTED BY LAW, BUHLER INDUSTRIES INC. DISCLAIMS ANY WARRANTIES, REPRESENTATIONS, OR PROMISES, EXPRESS OR IMPLIED, AS TO THE QUALITY, PERFORMANCE, OR FREEDOM FROM DEFECT OF THE COMPONENTS AND PARTS COVERED BY THIS WARRANTY AND NOT SPECIFICALLY PROVIDED FOR HEREIN.

TO THE EXTENT PERMITTED BY LAW, BUHLER INDUSTRIES INC. DISCLAIMS ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ON ITS PRODUCTS COVERED HEREIN, AND DISCLAIMS ANY RELIANCE BY THE PURCHASER ON BUHLER INDUSTRIES INC.'S SKILL OR JUDGMENT TO SELECT OR FURNISH GOODS FOR ANY PARTICULAR PURPOSE. THE PURCHASER'S ONLY AND EXCLUSIVE REMEDIES IN CONNECTION WITH THE BREACH OR PERFORMANCE OF ANY WARRANTY ON PRODUCTS MANUFACTURED BY BUHLER INDUSTRIES INC. ARE THOSE SET FORTH HEREIN. IN NO EVENT SHALL BUHLER INDUSTRIES INC. BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES (INCLUDING, BY WAY OF EXAMPLE ONLY AND NOT LIMITATION, LOSS OF CROPS, LOSS OF PROFITS OR REVENUE, OTHER COMMERCIAL LOSSES, INCONVENIENCE, OR COST OF REPLACEMENT OF RENTAL EQUIPMENT). IN NO EVENT SHALL FARM KING'S CONTRACT OR WARRANTY LIABILITY EXCEED THE PURCHASE PRICE OF THE PRODUCT.

(Note that some provinces or states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusion may not apply to you.) This warranty gives you specific legal rights and you may also have other rights, which vary from province to province or state to state.

Buhler Industries Inc. neither assumes nor authorizes any person or entity, including its selling representatives, to assume any other obligations or liability in connections with the sale of covered equipment, or to make any other warranties, representations, or promises, express or implied, as to the quality, performance, or freedom from defect of the components and parts covered herein. No one is authorized to alter, modify, or enlarge this limited warranty, or its exclusions, limitations and reservations.

Corrections of defects and improper workmanship in the manner, and for the applicable time periods, provided for herein shall constitute fulfillment of all responsibilities of Buhler Industries Inc. to the purchaser, and Buhler Industries Inc. shall not be liable in negligence, contract, or on any other basis with respect to the subject equipment.

This limited warranty is subject to any existing conditions of supply which may directly affect Buhler Industries Inc.'s ability to obtain materials or manufacture replacement parts.

Buhler Industries Inc. reserves the right to make improvements in design or changes in specifications to its products at anytime, without incurring any obligation to owners of units previously sold.

Government Legislation:

Warranty terms and conditions are subject to provincial or state legislation.

Important Note: This warranty does not apply to rentals.

www.farm-king.com

Farm King

301 Mountain Street South
Morden, Manitoba Canada R6M 1X7
Ph.: 204.822.4467 | Fax: 204.822.6348
Toll Free: 888.524.1004
E-mail: info@buhler.com
www.farm-king.com

Equipment shown is subject to change without notice.
©2010 Buhler Trading Inc. Printed in USA. TSX:BUI

bühler | a division of Buhler Industries Inc.